


R&S® CLIPSTER®

Configuration Tool

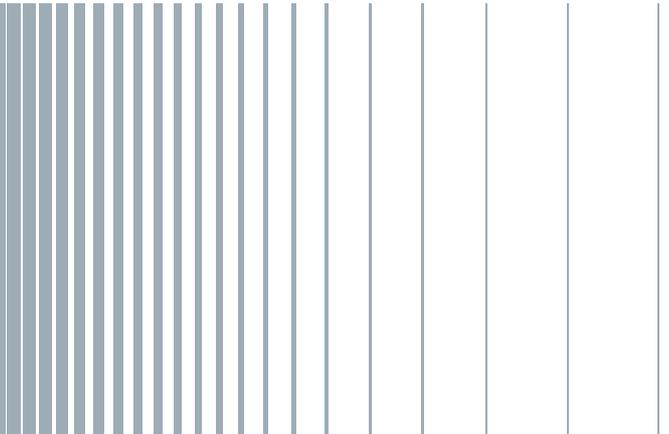

ROHDE & SCHWARZ





Document Configuration Tool

Version User Guide Version 5.10

Product CLIPSTER

Copyright Copyright © 2014 by Rohde & Schwarz DVS GmbH, Hanover. All rights reserved.

The manuals as well as the soft- and/or hardware described here and all their constituent parts are protected by copyright. Without the express permission of Rohde & Schwarz DVS GmbH any form of use which goes beyond the narrow bounds prescribed by copyright legislation is prohibited and liable to prosecution.

This particularly applies to duplication, copying, translation, processing, evaluation, publishing, and storing and/or processing in an electronic system.

Specifications and data may change without notice. We offer no guarantee that this documentation is correct and/or complete. In no event shall Rohde & Schwarz DVS GmbH be liable for any damages whatsoever (including without limitation any special, indirect or consequential damages, and damages resulting from loss of use, data or profits, or business interruption) arising out of the use of or inability to use the hardware, software and/or manual materials.

Those parts of this documentation that describe optional software or hardware features usually contain a corresponding note. Anyway, a lack of this note does not mean any commitment from Rohde & Schwarz DVS GmbH.

CLIPSTER and Spycer are registered trademarks of Rohde & Schwarz DVS GmbH. Linux is a registered trademark of Linus Torvalds. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Any other product names mentioned in this documentation may be trademarks or registered trademarks of their respective owners and as such are subject to the usual statutory provisions.

Headquarters Rohde & Schwarz DVS GmbH
Krepenstr. 8
30165 Hannover
GERMANY

Phone: +49-511-67807-0
Fax: +49-511-630070
E-mail: info.dvs@rohde-schwarz.com
Internet: <http://www.dvs.de>

Support Phone: +49-511-67807-125



Fax: +49-511-371985

E-mail: service.dvs@rohde-schwarz.com

Disclaimer

This product was developed and tested thoroughly. Unfortunately, the possibility of problems and errors can never be ruled out. To support us in helping you as fast as possible if such a case occurs, please fill in the online registration form which you can access from <http://www.dvs.de>.





Contents

1	Introduction	7
1.1	Overview	8
1.2	Target Group	9
1.3	Conventions Used in this User Guide	10
2	The Configuration Tool	13
2.1	Basics	14
2.2	Starting and Exiting the Configuration Tool	16
2.2.1	Starting the Software Module	16
2.2.2	Exiting the Software Module	18
2.3	Overview of the User Interface	19
2.4	Using Predefined Settings	22
2.4.1	How to Save Predefined Settings	22
2.4.2	How to Load Predefined Settings	23
2.4.3	How to Transfer the Default Settings to a Project	23
2.5	The Configuration Settings	25
2.5.1	The Group 'Bin'	26
2.5.2	The Group 'Capture-Tool'	28
2.5.3	The Group 'ControlPanel'	30
2.5.4	The Group 'Drag'n'Drop'	32
2.5.5	The Group 'External'	34
2.5.6	The Group 'General'	37
2.5.7	The Group 'Insert Project'	43
2.5.8	The Group 'Overlay'	45
2.5.9	The Group 'Performance'	49
2.5.10	The Group 'Project'	52
2.5.11	The Group 'SD-Aux'	55
2.5.12	The Group 'TCP/IP'	58
2.5.13	The Group 'Timecode'	60
2.5.14	The Group 'Timeline'	65
2.5.15	The Group 'VTR'	69



3	Video Format Settings	75
3.1	Basics	78
3.1.1	Accessing the Video Format Settings	78
3.1.2	Overview	79
3.1.3	Closing the Video Format Settings	81
3.2	The Video Format Settings in Detail	82
3.2.1	Timeline Name	82
3.2.2	The Video Formats	83
3.2.3	The Video Format Details	84
3.2.4	The Additional Configurations	89
3.2.5	Special Items when Configuring the Input Format	91
4	Bin Clip Properties	95
4.1	Basics	96
4.1.1	Accessing the Clip Properties	96
4.1.2	Overview	97
4.1.3	Closing the Clip Properties	98
4.2	The Bin Clip Properties in Detail	99
4.2.1	The General Clip Properties	99
4.2.2	The Flags	102
4.2.3	The Video Settings	102
4.2.4	The Audio Settings	107
5	Other Applications and Systems	111
5.1	The Multi-device Operation Mode	112
5.1.1	Hardware Installation and Setup	112
5.1.2	Synchronizing the Devices	115
5.1.3	Notes on the Multi-device Operation Mode	117
5.1.4	Cable Specifications for a Multi-device Operation	118
5.2	Mixer Function for Color Graders	120
5.3	Using CLIPSTER in a Network	121
5.3.1	Connecting to CLIPSTER	121
5.3.2	List of Commands	121
5.3.3	Exiting a Network Connection	127
6	Index	129



Introduction

This documentation describes the tools and settings to configure CLIPSTER, the real-time conforming and finishing system manufactured by R&S DVS. CLIPSTER is a powerful high-resolution video workstation with enormous flexibility, especially designed to meet the demands of modern post production houses.

CLIPSTER offers capturing, online editing and storing of digital film and audio data in one device. The system performs all works in real time. Video data is stored and worked with in its original uncompressed format, independent of resolution, color space or bit depth. All formats and resolutions can be processed, from SD up to 4K, and the final result can be played out in a freely selectable format. Conversions and calculation times for rendering processes are rarely necessary because of the high-quality hardware developed by R&S DVS. Additionally, up to 16 different channels of audio can be in- or output by CLIPSTER and the data can be accessed and processed in the software as easily as the video material. All film, video and audio data are stored in the Windows file system and thus accessible right away when working with other applications.

For the configuration and setup of the CLIPSTER video system and the software provides the CLIPSTER Configuration Tool. Here you can set up, for example, the period for the automatic save function of the project file (autosave) as well as more software specific settings, such as the bin properties. Additionally, various behaviors of the software can be specified, for example, what CLIPSTER should do during a drag-and-drop procedure.

Furthermore, when working with the CLIPSTER software, it is for most tasks necessary to configure and set the video format, for example, to perform either an in- or output of video signals correctly. In addition, it may be necessary to alter the properties of clips when using them in the CLIPSTER software.

Because CLIPSTER was designed to be the ultimate solution when working with video and audio in the high-end market, CLIPSTER can be seamlessly integrated into existing workflows when working with other applications and systems is required. However, to work with particular applications and systems properly CLIPSTER sometimes has to be configured in a certain way.

All these configurations and possible setups will be addressed in this user guide.



1.1 Overview

This user guide informs you about the general handling of the Configuration Tool as well as about various other configurations either possible or necessary for the CLIPSTER video system.

The chapters in this user guide contain the following information:

Chapter 1	Begins with a short introduction to CLIPSTER and its configurations, followed by a note regarding the audience this manual is written for and an explanation of the conventions used in this manual.
Chapter 2	This chapter describes the Configuration Tool. First, an overview of the software module will be given, followed by a description of its individual items.
Chapter 3	Setting the video format is for most works important and necessary, for example, for a record or a play-out operation. Besides descriptions about the basic usage of the window to set the video format, an overview of the window will be given, followed by descriptions of each settings item in detail.
Chapter 4	While adding clips to the bin of the CLIPSTER software, some of the clip's properties cannot be detected by CLIPSTER automatically and have to be set manually afterwards. In this chapter the basic usage of the window to set the clip properties will be described, followed by an overview of the window. After this a more detailed description of each settings item will be provided.
Chapter 5	This chapter provides further details and general information for a proper configuration of the CLIPSTER video system when you want to use it with other applications and systems. Among them you can find explanations about how to operate CLIPSTER in a multi-device operation mode and via a network from another workstation.
Index	This chapter facilitates the search for specific terms.



1.2 Target Group

To use this manual you should have experience in PC handling and be familiar with the handling of digital video equipment.

For the full use of the explained individual configuration settings it is best to have extensive knowledge in the field of digital video and the CLIPSTER software as well as its functions in general. Furthermore, if you want to use other applications or systems together with CLIPSTER, you should know how to handle them as well.



1.3 Conventions Used in this User Guide

The following typographical conventions will be used in this documentation:

- Texts preceded by this symbol describe activities that you must perform in the order indicated.
- Texts preceded by this symbol are parts of a list.



Texts preceded by this symbol are general notes intended to facilitate work and help avoid errors.



You must pay particular attention to text that follows this symbol to avoid errors.

“ ” Texts enclosed by quotation marks are references to other manuals, guides, chapters, or sections.

'Window'	Text in bold with single quotation marks indicates a window name
BUTTON	Text in small caps and bold indicates push buttons
<i>Group/Menu</i>	Text in italic and bold indicates either a group name, menu name or options in a menu list
<i>Menu » Option</i>	In the specified group or menu select the stated item
Item	Text in bold only stands for other labeled items of a user interface
<i>File</i>	Directory structure or file on a storage location, or a bin folder structure
Entry	Parameters, selections or entries made in the program
[Key]	An individual key or a key combination on a keyboard

Keyboard Shortcuts

To perform options or procedures with the keyboard often requires simultaneous pressing of two keys.

Example:

[Ctrl + F1] If this is given, hold down the [Ctrl] key and press simultaneously the [F1] key.



Introduction

▶ Conventions Used in this User Guide



The Configuration Tool

The Configuration Tool is one of the basic software modules of the CLIPSTER software. It is used to configure and set up the video system and the CLIPSTER software. For example, with it you configure the period for the automatic save function of the project file (autosave) as well as more software specific settings, such as the bin properties. For this the Configuration Tool provides two configuration groupings on tabs: One where you can define project related settings and one where default values and settings are set.

This chapter explains the Configuration Tool in detail. First, because this is the basis of the CLIPSTER, the two different configuration groups are explained. This will be followed by explanations how to start and exit the software module. After that an overview of the user interface will be given as well as an explanation about how to use predefined settings with the CLIPSTER. The chapter will be concluded with a detailed description of the individual settings groups of the Configuration Tool and the respective items they provide.



For further background and system structure information please refer to the other user guides delivered with CLIPSTER.

2.1 Basics

The Configuration Tool provides overall two configuration groupings that can be accessed via tabs from its window:

- You can define project related settings in a project grouping (tab **Project**), or
- you can configure default settings that will be used in general (tab **Defaults**).

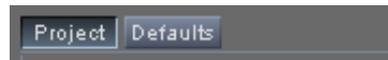


Figure 2-1: The two configuration groupings with their tabs

The two tabs comprise the following:

- | | |
|---------------------|---|
| tab Project | The tab Project includes settings that will be used for the currently active project only. These settings will be stored together with a project in its project file and are therefore only temporarily available as long as this particular project is not closed. Each time the project is opened in the CLIPSTER software, the settings for the tab Project will be loaded and activated again for this project. |
| tab Defaults | The tab Defaults contains settings that will be used for each new project as well as for a general setup of the CLIPSTER software. Because the default settings include configurations concerned with the CLIPSTER software in general as well, it provides comparatively more settings than the project related ones. Use the default settings in case you want to change the CLIPSTER software settings or the default values for each initialized new project. They will be stored automatically when the main software is shut down. |



The default configuration settings can be saved and loaded again whenever necessary. Additionally, when the default settings differ from the project related ones, you can transfer them to the tab **Project** to make them valid for your currently opened project. The saving and loading of the default values as well as a transfer of them are explained in section “Using Pre-defined Settings” on page 22.

Because all settings of the tab **Project** are available on the tab **Defaults** as well, the explanations of all individual items (see section “The Configuration Settings” on page 25) will describe the settings of the tab **Defaults** only. Thus the settings of the project related grouping are included as well.



2.2 Starting and Exiting the Configuration Tool

This section explains how to start the Configuration Tool and how to exit it.

2.2.1 Starting the Software Module

This section provides you with a description how to get the Configuration Tool running. For this you have to start the CLIPSTER software first:

- Select from the **START** button menu of Windows in the submenu **R&S DVS** the entry for the CLIPSTER software (for example, **All Programs » R&S DVS » R&S DVS Clipster**).
Alternatively, you may also start the program via a double-click on the CLIPSTER icon available on the desktop of Windows.

This will load the CLIPSTER software by R&S DVS. As the starting user interface, the CLIPSTER Edit Tool will be started automatically and you have to open the Configuration Tool manually. To do this two possibilities exist:

1. You can start the Configuration Tool with the task bar of the CLIPSTER software, or
2. you can start the Configuration Tool with the help of the menus of the CLIPSTER software

Both possibilities are explained in the following.



More information about the task and menu bar can be found in the “CLIPSTER Edit Tool” user guide.

Starting the Configuration Tool Using the Task Bar

To start the Configuration Tool with the task bar of the CLIPSTER software perform the following:

- Activate the Configuration Tool with the button **CONFIG...** in the task bar of the user interface ().

This will open the user interface of the Configuration Tool with the tab **Project** activated (see section “Overview of the User Interface” on page 19). Then you can alter the project related settings directly or switch to the default settings with the help of the tab **Defaults** (see section “Basics” on page 14).

Starting the Configuration Tool Using the Menu Bar

Alternatively, to start the Configuration Tool you may also use the menus of the menu bar. When using this method, you have two options at hand: you can choose between a configuration of the project related settings or a configuration of the default values.

To start the Configuration Tool with the project related settings tab activated perform the following:

- Via the menu bar of the CLIPSTER software select from the **Options** menu the **Project config...** menu option.

This will open the Configuration Tool of CLIPSTER with the tab **Project** activated (see section "Overview of the User Interface" on page 19). Then you can alter the project related settings directly.

To start the Configuration Tool with the default settings tab activated perform the following:

- Via the menu bar of the CLIPSTER software select from the **Options** menu the **Defaults...** menu option.

This will open the Configuration Tool of CLIPSTER with the tab **Defaults** activated. Then you can alter the default and general CLIPSTER software settings directly. A screen shot of the user interface with the tab **Defaults** activated can be found in section "The Group 'Bin'" on page 26.



You can switch between the two configuration possibilities easily via the tabs at the top of the window of the Configuration Tool (see section "Basics" on page 14).



2.2.2 Exiting the Software Module

To end the current Configuration Tool session perform the following:

- Use either one of the following possibilities:

button OK	This button confirms your alterations to the settings in the Configuration Tool and closes its user interface. Then the new settings will be in effect.
button CANCEL	The button CANCEL closes the user interface of the Configuration Tool without confirming your settings. The video system and the CLIPSTER software will use the latest confirmed settings.
[Alt + F4]	Same as button CANCEL .
	Same as button CANCEL .



CLIPSTER stores the configuration settings made under the tab **Defaults** automatically when the main software is shut down (how to exit the CLIPSTER software is described, for example, in the “CLIPSTER Edit Tool” user guide). The settings set under the tab **Project** will be saved project specific in a project file.

After this the Configuration Tool will be closed and you return to the main window of the CLIPSTER software.

2.3 Overview of the User Interface

The following figure shows the user interface of the Configuration Tool as it appears after starting the module (for information on how to start it see section “Starting the Software Module” on page 16):

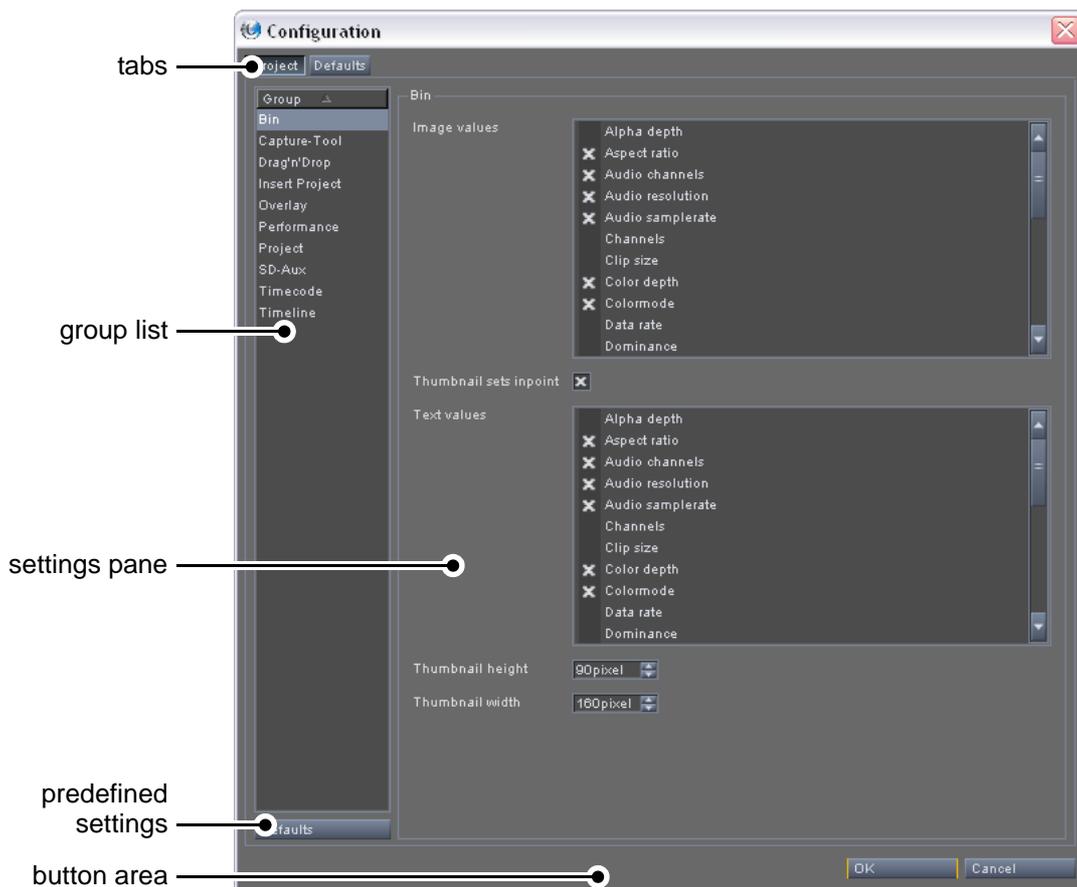


Figure 2-2: The user interface of the Configuration Tool

After starting the Configuration Tool software module you can find the following items in its user interface:

- tabs

The Configuration Tool provides overall two configuration groupings: one to set project specific settings and one to configure the default settings. These two groupings can be accessed easily with the tabs at the top of the CLIPSTER’s user interface. As soon as a different tab than the selected one is activated, the Configuration Tool will change its appearance and the respective settings groups will be displayed in the group list to the left. For further information about the tabs and the configuration groupings see section “Basics” on page 14.



group list

On the left side of each tab you can find a group list that provides access to the different settings. According to the selected tab (tab **Project** or tab **Defaults**) there will be different groups available in the group list. The groups available when the tab **Project** is activated are used to configure project related settings, while the groups under the tab **Defaults** configure the default settings used for each new project and the CLIPSTER software in general. Once an entry in the list is selected, the settings pane to the right will alter its appearance and the configuration items of the respective group are displayed. You can then change the settings of this group.



The items of the group list can be sorted. Simply click



on the heading to sort the entries alphabetically in ascending or descending order. The type of order will be indicated by the triangle to the right of the heading.

settings pane

The settings pane shows the settings of the selected group entry (group list to the left) that are available under this group. To change the settings alter the configurations in the settings pane and confirm your alterations with the **OK** button.



This will close the Configuration Tool. Still, the settings of the tab **Defaults** will only be saved when the whole CLIPSTER software is closed, while the settings of the tab **Project** are saved together with the currently active project in a project file.

Furthermore, you have the possibility at hand to export the default configuration settings and load them again at a later time (see section "Using Predefined Settings" on page 22 for further details).



predefined settings	With the button for the predefined settings you can select already determined configurations. When the tab Project is activated, the button will be labeled with DEFAULTS . Then you can transfer the configurations set on the tab Defaults to the Project tab. When the tab Defaults is activated, the button will show RESET . A click on this button then resets all default values back to the installation settings of the CLIPSTER software. Further information about how to use the button(s) and the predefined settings can be found in section “Using Predefined Settings” on page 22.
button area	The buttons in the button area are used to confirm or cancel your alterations of the settings. Because they are also used to close the Configuration Tool, a detailed description of them can be found in section “Exiting the Software Module” on page 18.



2.4 Using Predefined Settings

Different tasks may ask for different settings and with the Configuration Tool you can easily switch between different settings. For this you have the possibility at hand to save the default and CLIPSTER software settings to a file. Afterwards they can be easily loaded again at a later time. Additionally, when new or different default settings are available, you can transfer them to any CLIPSTER project you want without any problem. By using the above mentioned procedures you can build up a library of various configuration settings and use them for different purposes or projects without configuring the whole system anew.

This section describes shortly how to save and load the default settings of the CLIPSTER software as well as how to transfer them to a project where they should be applied.

2.4.1 How to Save Predefined Settings

In order to save any settings you have to configure them first and afterwards store them into a file. For this perform the following:

- Open the Configuration Tool as described in section “Starting the Software Module” on page 16 and switch to the tab **Defaults**, if not already active.
- On the tab **Defaults** configure all settings to your liking via the settings groups in the list to the left and the settings pane to the right (see section “Overview of the User Interface” on page 19).
- Afterwards confirm these settings with the button **OK**.

The default settings are altered now and you can continue by saving these default values to a file:

- On the **Options** menu of the menu bar in the CLIPSTER software select the menu option **Save defaults...**
- In the opening dialog window specify a storage path and file name for the configuration file to be saved and confirm your entries with the button **SAVE**.

This will save the settings of the tab **Defaults** to the specified file. By performing the above detailed procedure several times you can build up a library of different configuration settings that can be loaded again later and then transferred to any project you want.



Further information about the menu bar and the menu option **Save defaults...** can be found in the “CLIPSTER Edit Tool” user guide.

2.4.2 How to Load Predefined Settings

As soon as a configuration settings file is available, you can load it again into the CLIPSTER software at any time. With this you can replace the currently set default values against the stored ones. Afterwards the new default values will be used for each new project and for the configuration of the CLIPSTER software and the video system in general. Additionally, if desired, you can transfer the new default settings to your currently active project.

To load a previously saved configuration file perform the following:

- On the **Options** menu of the menu bar of CLIPSTER select the menu option **Load defaults...**

This will open the standard dialog window for the selection of a file.

- In the dialog window to load a file select the configuration file that contains the desired settings from the list box or enter its name in the respective entry field.
- Once the appropriate file is selected, confirm your choice with the button **OPEN**.

The settings stored in the chosen configuration file will now be set as the default values on the tab **Defaults** of the Configuration Tool. In the future these will then be used for each initialized new project. Furthermore, depending on the loaded settings some configurations of the CLIPSTER software in general and the video system may have changed.



Some changes to the settings will be in effect after a restart of the software only (see section “The Configuration Settings” on page 25).

Further information about the menu option **Load defaults...** can be found in the “CLIPSTER Edit Tool” user guide.

Next, when new or different default settings are available, you can transfer them to any CLIPSTER project you want.



The settings on the tab **Defaults** are stored together with the CLIPSTER software when it is shut down.

2.4.3 How to Transfer the Default Settings to a Project

When new or different default settings are available on the tab **Defaults**, you can transfer them to any CLIPSTER project you want. For this perform the following:

- Open the project where the new or different settings should be applied to and load it into the CLIPSTER software.



- After this open the Configuration Tool as described in section “Starting the Software Module” on page 16 and, if not already activated, switch to the tab **Project**.
- Then click on the button **DEFAULTS** below the group list (see section “Overview of the User Interface” on page 19) to transfer the settings of the tab **Defaults** to the project settings.

This will open a warning message whether you really want to transfer the default settings to the project settings.

- Click on the button **OK** to transfer the settings.
- After this confirm the new project settings with the button **OK** in the button area.

The settings available on the tab **Defaults** are now set on the **Project** tab as well and they are enabled for your currently loaded project.



The settings on the tab **Project** are stored in a project file as soon as the loaded project is saved.

2.5 The Configuration Settings

In this section you can find detailed descriptions about the individual settings groups of the Configuration Tool and the respective items they provide.

The Configuration Tool provides overall two configuration groupings on different tabs. The groups available in the group list when the tab **Project** is activated are used to configure project related settings, while the groups under the tab **Defaults** configure the default settings used for each new project and the software in general. Because all settings of the tab **Project** are available on the tab **Defaults** as well, the following explanations of all individual settings items describe the settings on the tab **Defaults** only. Thus the settings of the project related grouping are included as well.



For further information about the tabs please refer to section “Basics” on page 14.

The configuration settings provided by the tabs are mostly concerned with the behavior or the appearance of other software modules included in the CLIPSTER software package, e.g. the CLIPSTER Edit Tool or the CLIPSTER I/O Tool. For more information about specific items not further explained in the upcoming sections, please consult the other user guides delivered with CLIPSTER.

The tab **Project** includes settings that will be used for the currently active project only. These settings will be saved together with a project in its project file and are therefore only temporarily available as long as the currently opened project is not closed. The tab **Defaults** contains settings that will be used for each new project as well as for a general set-up of the CLIPSTER software and video system. They will be stored automatically together with the main software when it is shut down.



2.5.1 The Group 'Bin'

The group **Bin** contains settings regarding the bin of the CLIPSTER software.

The bin is the library and clip management tool of the CLIPSTER software. With it you can sort clips into different folders and preview them via thumbnails. Furthermore, various text information are available for the clips in the bin to provide an overview of selectable clip properties at a glance.

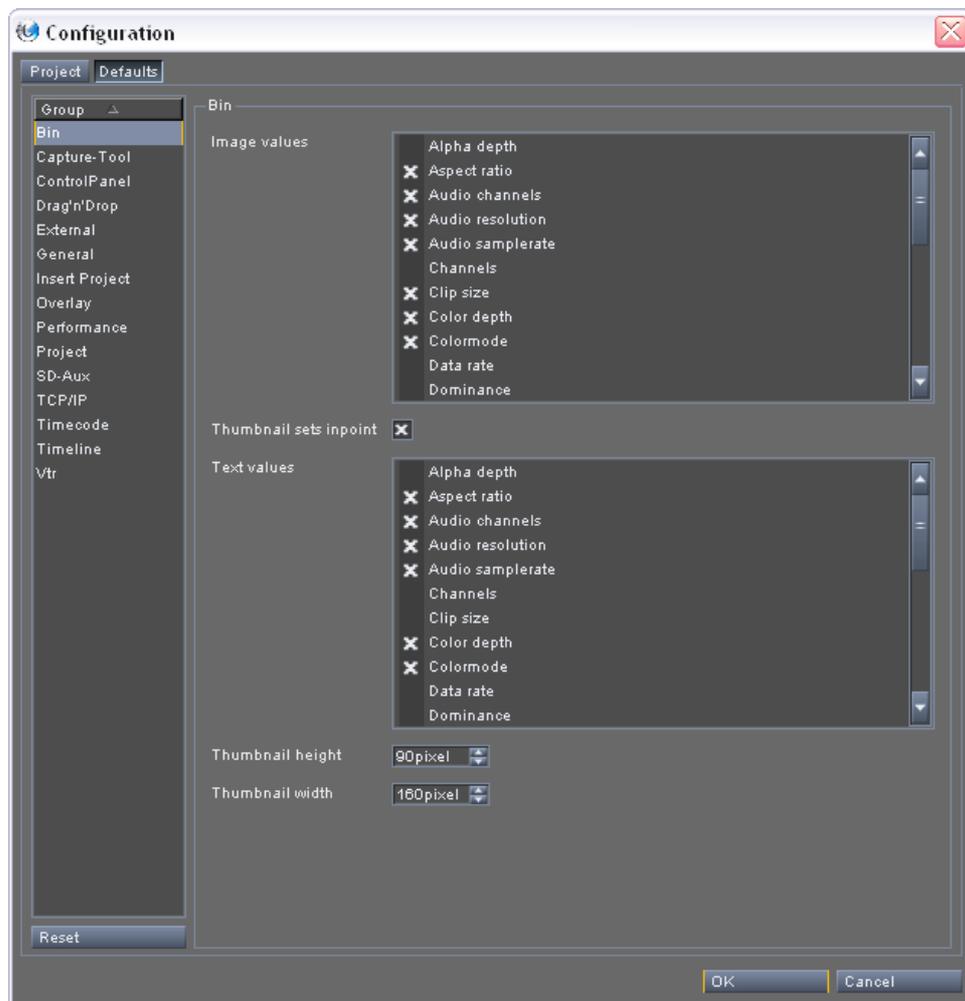


Figure 2-3: The settings items of the group 'Bin'

In detail the group **Bin** provides the following settings items:

- Image values** In the list box **Image values** select the text information that should be displayed to the right of the clips' thumbnails in the contents area of the bin. The selected text information will be available in the thumbnail view of the bin only. Additionally, these values will also be used for the thumbnails shown by the Content Browser of the CLIPSTER software.
- Thumbnail sets inpoint** By adjusting a thumbnail's scrub bar cursor of a clip in the bin you can select a starting point (inpoint) for the clip, for example, when it is dragged to the timeline. Then the CLIPSTER software may use the selected starting point as the inpoint of the clip in the timeline. If this check box is enabled, the inpoint will be set according to the position of the scrub bar cursor. If it is disabled, the position of the thumbnail's scrub bar cursor will be disregarded and the full clip will be, for example, added to the timeline.
- Text values** In the list box **Text values** select the text information that should be displayed when the contents area of the bin is set to the text information view of the clips. The selected text information will be available for the text information view of the bin only, i.e. they will not be displayed when the contents area is in the thumbnail view of the clips.
- Thumbnail height**
Thumbnail width These values allow you to adjust the height and width of the thumbnails visible in the thumbnail view of the bin. Either enter the size (in pixels) manually or use the controls to the right of the entry field to step the value up or down until it is set as desired. Additionally, these values will also be used for the thumbnails shown by the Content Browser of the CLIPSTER software.
- Notation: In pixels

2.5.2 The Group 'Capture-Tool'

With the group **Capture-Tool** you determine settings for the CLIPSTER I/O Tool. Currently it provides settings concerned with the conforming processes, such as the building of a timeline from a given EDL.

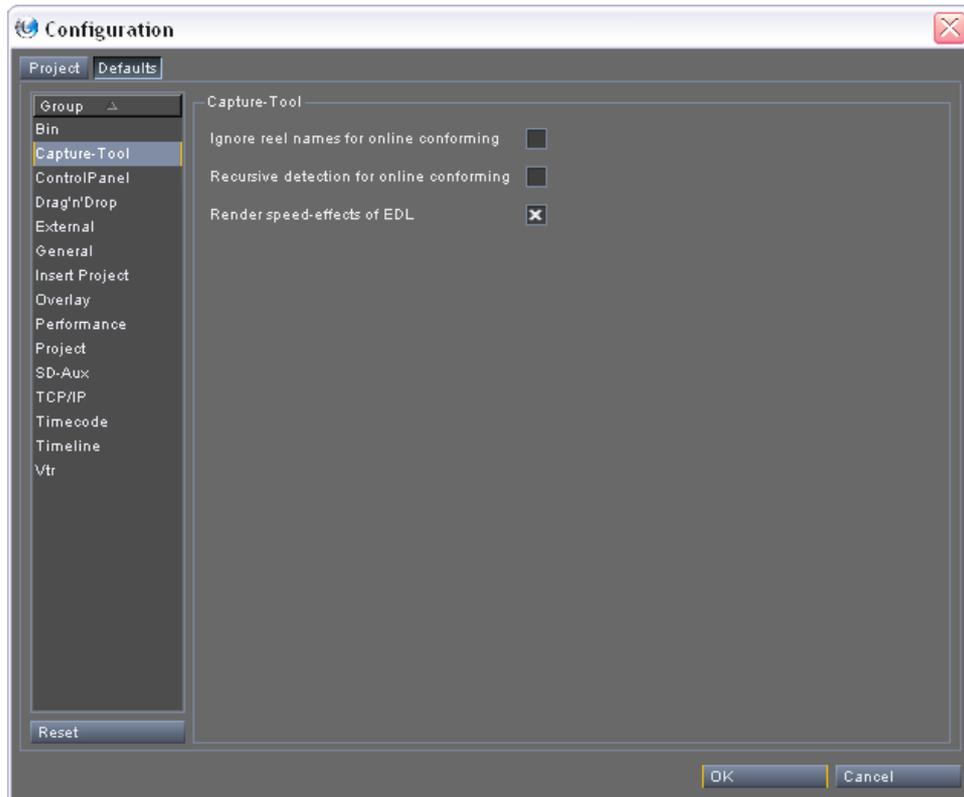


Figure 2-4: The settings item of the group 'Capture-Tool'

The group **Capture-Tool** provides the following settings item:

- | | |
|--|---|
| Ignore reel names for online conforming | To avoid conflicts due to identical source timecodes during an online-conforming, R&S DVS stores in the source timecode files at a proprietary location within their headers the reel (tape) names. Then, when performing an online-conforming, the names of the reels in the headers are compared with the ones provided by the EDL. In case they do not coincide, the clip will not be created in the timeline. |
|--|---|



With this setting you can ignore the reel names for the online-conforming, i.e. no comparison of the names will be performed. This setting is especially useful for files that were not recorded by the CLIPSTER video system, because then they will not provide the reel names in their headers.

Recursive detection for online conforming

When performing an online-conforming with clips that provide source timecodes, CLIPSTER usually conforms clips stored under the first two levels of directories only (further subdirectories below the second level are disregarded). By activating this setting all subfolders in the stated directory will be searched for clips, and all found clips will be added to the bin of the CLIPSTER I/O Tool.

Render speed-effects of EDL

During an autoconforming process it may be necessary to render motion effects of an EDL (M2 speed changes). If this check box is enabled, the motion effects will be created and rendered, i.e. image files may be omitted or created anew according to the specified speed of the effect and the set frame rate. If it is disabled, the command lines of this effect in the EDL will be disregarded and the respective clip will be created in the timeline with speed 1 as usual.



2.5.3 The Group 'ControlPanel'

To the CLIPSTER workstation you can connect additional control panels, for example, a color correction panel or an edit bay style transport panel. These can then be configured and set up with the group **ControlPanel**.



The control panels are an optionally available feature of CLIPSTER. Depending on the overall configuration of your video workstation this feature may not be provided.

Furthermore, this group is valid for the CLIPSTER software in general and is therefore available on the tab **Defaults** only.

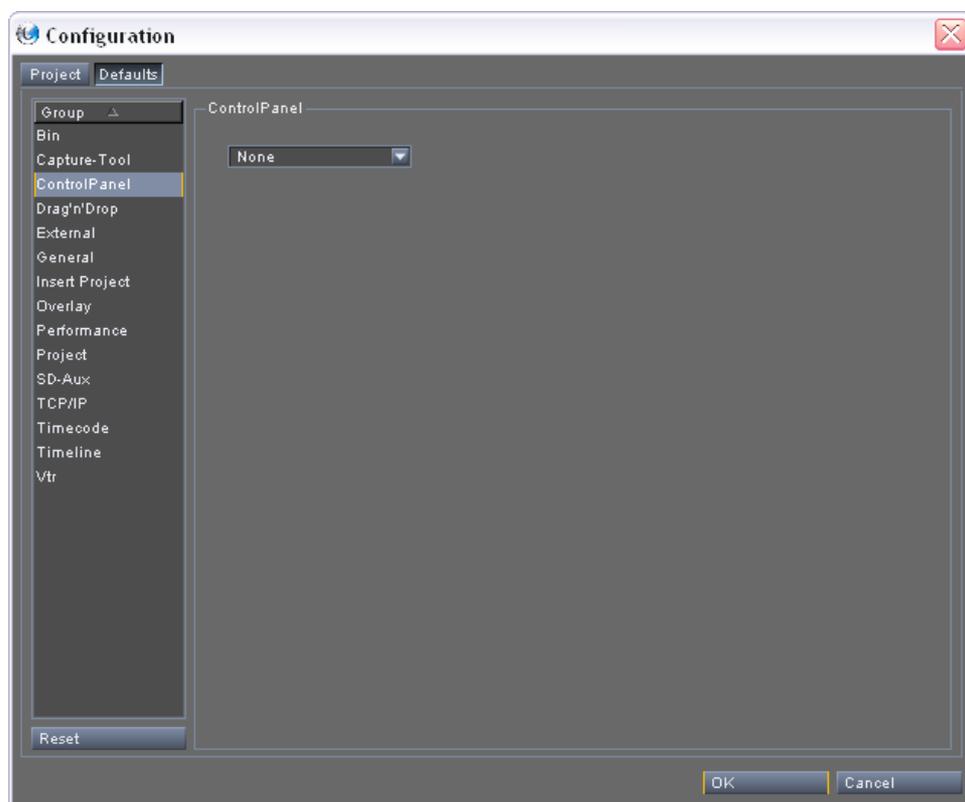


Figure 2-5: The settings item of the group 'ControlPanel'

From the available combo box select the control panel that is connected to your system. Afterwards the settings pane will alter its appearance and the settings items for the selected control panel will be displayed.



In case you have not purchased the control panel option, the settings items will appear dimmed and be unavailable.

For a detailed description of the individual settings items please refer to the respective user guide of the control panel.

The combo box provides the following values:



Only one type of control panel can be connected to the CLIPSTER video system and thus configured with this group.

combo box	Select from the combo box the type of control panel that is connected to your system:
None	No additional control panel is connected to the CLIPSTER video system.
ControlPanel	Configures the CLIPSTER Color Correction Panel and/or the CLIPSTER Transport Panel for the usage with CLIPSTER. They can be used either in stand-alone setups or in combination.
Control-PanelLX	Configures the deluxe-edition of the CLIPSTER Color Correction and Transport Panel. As a standard this panel is delivered full-fledged with color correction, configuration and transport/selection capability.

2.5.4 The Group 'Drag'n'Drop'

The group **Drag'n'Drop** deals with all possible drag-and-drop procedures in the CLIPSTER software. For example, when adding clips to the bin with a drag-and-drop procedure from a file manager, the CLIPSTER software is able to create folders in the bin automatically. They will then imitate the directory structure present on the video hard disk array and the video and/or audio clips will already be sorted into the respective folders. This behavior and others can be configured with the **Drag'n'Drop** group of the Configuration Tool.

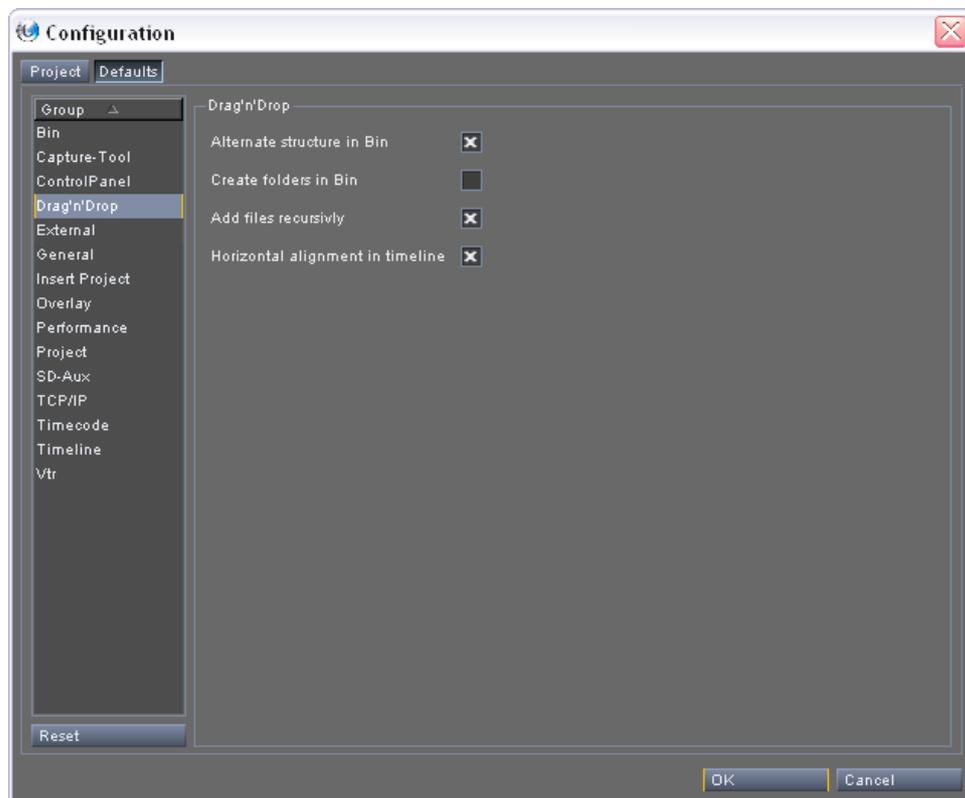


Figure 2-6: The settings items of the group 'Drag'n'Drop'

In detail the group **Drag'n'Drop** provides the following settings items:

Alternate structure in Bin

If a directory from a file manager is dragged to the contents area or to a folder in the folder area of the bin, this setting will put the clip one bin folder up, i.e. the last (sub)folder will be ignored during the creation of the folders in the bin and the clip will be sorted into its previous folder.

Example: The clip *Clip* (*Clip_0000.bmp*) in the directory *DVS\Movies\Clip* will be sorted into the bin folder structure *\ DVS\Movies*.



For this feature the check box **Create folders in Bin** has to be activated.

Create folders in Bin

When this item is activated, folders are created automatically in the folder area of the bin during the drag-and-drop procedure of a clip directory to the bin. The created folders will then imitate the directory structure present on the video hard disk array and the video and/or audio clips will already be sorted into the respective folders.

Add files recursively

With this check box activated all subfolders present under the dragged directory will be searched for clips. If it is not activated, only those clips/folders will be created that contain a clip directly.



This is a general setting for the drag-and-drop procedure and will work always if activated.

Horizontal alignment in timeline

For a drag-and-drop procedure from the bin to the timeline of the CLIPSTER Edit Tool you may select more than one clip (e.g. with the [Ctrl] key pressed). Then they can be added to the timeline in one step. The video or audio clips will be either aligned horizontally in one track of the timeline or put each into a different timeline track directly below the selected one. This drag-and-drop behavior can be configured with this setting: If activated, the clips will be arranged horizontally in the respective timeline track. If deactivated, the clips will be added to a different track each.

2.5.5 The Group 'External'

The group **External** allows you to specify different applications to process your video data with. They can then be accessed via the **Export to Application** menu options available in the CLIPSTER software.



This group is valid for the CLIPSTER software in general and is therefore available on the tab **Defaults** only.

For example, once a clip is dragged from the bin to the control area of the CLIPSTER Edit Tool (source-edit mode of the control area), the set application(s) under the **Export to Application** menu option on the context menu of the source's video overlay to the left can be selected. Then you can choose one of them to transfer the video data (either a single frame or a complete sequence) to the specified program.

However, to have an application available in the submenu of the **Export to Application** menu option you have to define and set it first which can be done with the settings items of the group **External**.



Further information about the **Export to Application** menu options can be found in the "CLIPSTER Edit Tool" user guide.

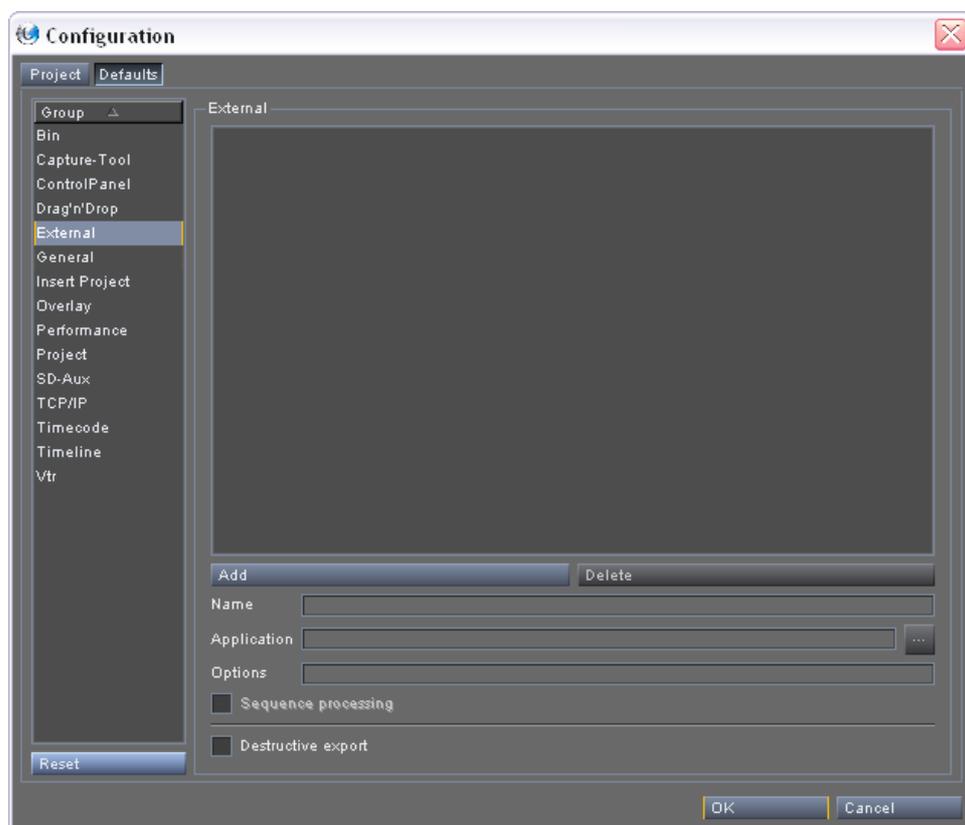


Figure 2-7: The settings items of the group 'External'

In the settings pane of the Configuration Tool with the group **External** selected you can find the following items:

List box In the list box you can see a list of all already set and specified external applications. Each entry in this box will also be available in the submenus of the **Export to Application** menu options. Select from this list box one entry, for instance, to change its settings or to delete it.

ADD The button **ADD** creates a new application profile with the default name 'New profile'. It will be added to the list box above and the specification items below the buttons become available to set the necessary profile parameters.

DELETE With the button **DELETE** you can delete an already defined external application from the list box. Simply select an entry from the list box and press this button to delete it.

Name In the entry field **Name** enter the name of your application profile. This field will be available as soon as an entry is selected from the list box or a new one is added.

Application In this entry field you have to state the path and file name of the external application. You may also click on the button to the right of the entry field () to select an application directly via the opening dialog window. This field will be available as soon as an entry is selected from the list box or a new one is added.

Notation: `drive_letter:\directory\
subdirectory\filename.exe`



Instead of the backslash (\) you may also use a slash (/).

Example: `C:\WINDOWS\system32\
mspaint.exe`

Options

For a defined external application you may have to set appropriate program parameters, for instance, to allow for a processing of an image sequence. They can be entered in this entry field. Please consult the respective program's user guide for more information about its program parameters. This field will be available as soon as an entry is selected from the list box or a new one is added.

Sequence processing

Enable this check box when you want the complete sequence (each frame between the set in- and outpoint) to be opened in the external application. If it is disabled, only a single frame, i.e. the one selected by the scrub bar or timeline cursor, will be transferred to the application. This field will be available as soon as an entry is selected from the list box or a new one is added.



To use this feature the external application has to support the processing of image sequences.

Destructive export

Enable this check box to process the source material directly in the external application. If you save the data then with the external application, the source material will be overwritten.

When the check box is disabled, the source material will be copied prior to a processing and the copied material is then processed in the external application. It will be copied to the same path and location where the original material is stored with an incrementing number added to the directory name of the clip (*<name of clip's directory><incrementing number>*).



The **Destructive export** check box is valid for all external applications specified with the group **External**.



When the **Sequence processing** check box is activated, each frame between a set in- and outpoint will be sent to the external application. However, this applies to a single clip only: If, for example, in the timeline the in- and outpoint are set outside of the clip where the menu option **Export to Application** was called, only the image sequence of the respective clip where the menu option was called will be sent.

2.5.6 The Group 'General'

The items under the group **General** are mainly concerned with general settings for the CLIPSTER software. Here you can set, for example, the period for the automatic save function of the project file (autosave).



This group is valid for the CLIPSTER software in general and is therefore available on the tab **Defaults** only.

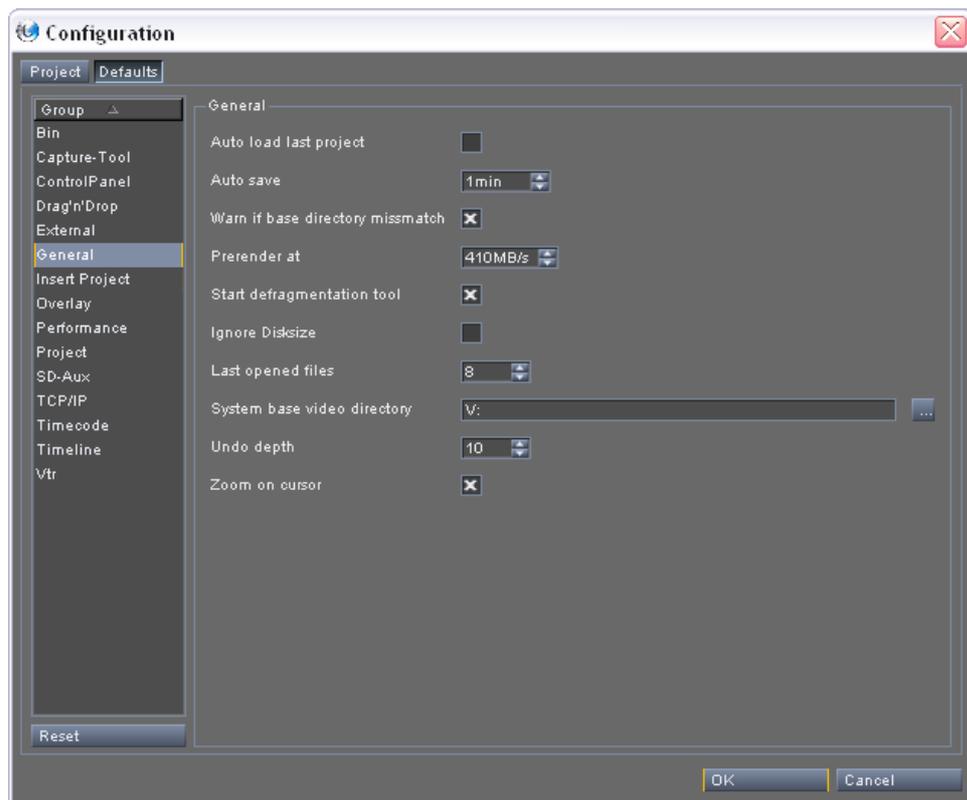


Figure 2-8: The settings items of the group 'General'

The settings pane of the group **General** provides the following items:

- Auto load last project** - If enabled, this setting automatically loads the project that was opened last with the CLIPSTER software after the starting of the application.



Auto save

The autosave function automatically saves your project file after certain periods of time for backup purposes. The backup will be saved to an extra file with the file name `<project file name>.cp.autosave`. Every time this backup is performed it will be saved to this file. Then it will contain the last changes to your project currently under work. Use this item to set the time interval for an automatic backup of your work's progress. Either enter the value (in minutes) manually or use the controls to the right of the entry field to step the value up or down until it is set as desired.



A value of zero (0) deactivates the autosave function.

When you start a new project file, the autosave function is disabled due to a missing file name for the project. To enable autosave you have to save the project file first and thus assign a name to it.

Notation: In minutes

file extension: `*.cp.autosave`

Warn if base directory mismatch

With this item activated you will receive a warning when a clip is added to the bin that is not located within the **System base video directory** (see below). Furthermore, a warning icon will be superimposed on the thumbnail of the respective clip to indicate that it may not be real-time capable. If this function is deactivated, you will receive neither warning nor any indication by the thumbnail of the clip.



Further information about the real-time capability and the warning markings of clips in the bin can be found in the "CLIPSTER Edit Tool" user guide.

Prerender at

Indicates the data rate at which the CLIPSTER Edit Tool will mark a timeline element for prerendering in the timeline. It will be marked when this value is exceeded. If this setting is set too high, no prerendering will be indicated in the Edit Tool but a play-out may not work properly due to drops (images/frames that could not be read and sent in time). If it is set too low, maybe unnecessary prerendering will be indicated by the CLIPSTER software. Either enter the value (in MB/sec.) manually or use the controls to the right of the entry field to step the value up or down until it is set as desired.



This value is a system setting that should not be altered. Only if your video hard disk array is full with data (about 80% full) and you observe drops, it may be indicated to set it to a lower value. In any other case please contact the R&S DVS service department first.

Notation: In megabytes per second
Default value: 410 MB/sec .

Start defragmentation tool

This setting enables the automatic starting of the defragmentation tool together with the CLIPSTER software. The defragmentation tool is a background process that performs real-time optimized defragmentations on the video hard disk array during stand-still times of the video system, i.e. when no real-time operations are performed. When activated, the defragmentation tool will automatically be started as soon as the CLIPSTER software starts.



Further information about the defragmentation tool can be found in the "CLIPSTER Edit Tool" user guide.



Ignore disk size

When the amount of data on the video hard disk array exceeds a certain safety limit (currently 15% free disk space), you will be informed about this by an error message each time the CLIPSTER software is started, as well as prior to a record operation. However, a record of material with the CLIPSTER software will still be possible until only 10% of free disk space is available (absolute necessary safety margin). Afterwards the recording of video or audio data with the CLIPSTER software is usually prohibited. With this check box you can turn on or off the error messages about the free space as well as overrule the absolutely necessary safety margin. A record can then be performed until the hard disk array is completely filled with data.



By overruling the absolutely necessary safety margin you will most certainly impair the real-time capability of CLIPSTER. If the first safety limit of the video hard disk array is reached (15% free space), it is best to refrain from copying or recording any more data onto the video hard disks.

Last opened files

With this item you can set the number of recently loaded project files that should be displayed by the **Recent files** menu option on the **Project** menu (menu bar of the CLIPSTER software). They can then be loaded again directly to the CLIPSTER software without searching for them in a dialog window. Either enter the number manually or use the controls to the right of the entry field to step the value up or down until it is set as desired.



Instead of the backslash (\) you may also use a slash (/).

Example: v:\Video

Default value: v:

Undo depth

This item changes the number of steps that can be undone via the **Undo** menu option on the **Edit** menu (menu bar of the CLIPSTER software). Either enter the number manually or use the controls to the right of the entry field to step the value up or down until it is set as desired.

Zoom on cursor

With this check box you determine whether a zooming in or out of the timeline will be performed on the position of the timeline cursor (timeline cursor is center of the zoom) or on the set viewing position of the timeline (the currently visible center of the timeline will be zoomed to). If activated, a zoom on the timeline cursor will be performed, otherwise a zoom on the viewing position.

2.5.7 The Group 'Insert Project'

The insertion of projects in the timeline of the CLIPSTER Edit Tool can be configured with the settings group **Insert Project**. For example, here you can set the name of the bin subfolder where the inserted clips will be added.

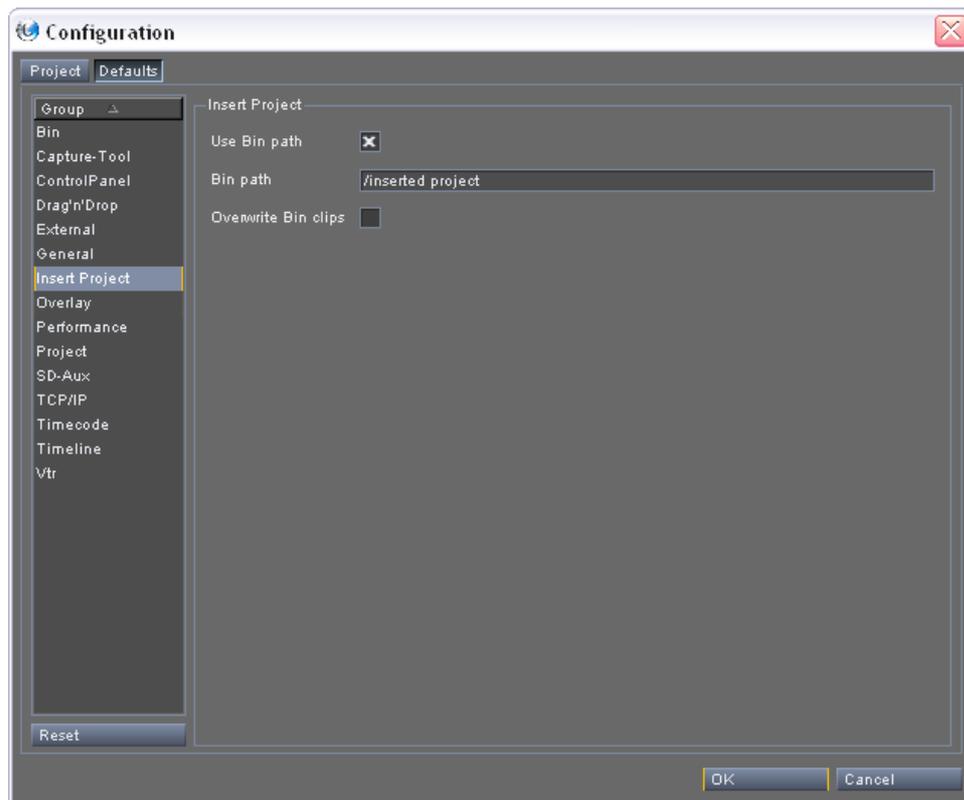


Figure 2-9: The settings items of the group 'Insert Project'

In detail the group **Insert Project** provides the following settings items:

- Use Bin path** If a project is inserted and this check box is activated, the added bin clips of the inserted project will be sorted into either an already existing or a new bin folder. The path and name of the bin folder can be set with the **Bin path** entry field (see below). When it is deactivated, the inserted bin clips will be added to the root path of the bin.



Bin path

With this entry field you set and determine the bin folder where the bin clips of the inserted project should be sorted to. It will be used during the insertion of the project when the **Use Bin path** check box is activated. To set a folder name and path simply type in the folder name together with the path (if applicable).

Notation: / folder / subfolder

Example: / tempest / act_1

Default value: / inserted project

Overwrite Bin clips

If the bin clips already present in the destination folder carry the same name as the clips to be added by the inserted project, they will be overwritten when this check box is activated. Otherwise they will be added to the bin with a slightly altered bin clip name (added incrementing number) without overwriting the present clips.

2.5.8 The Group 'Overlay'

With the video overlay in the control area of the CLIPSTER software you can view the material present in the timeline. All clips and the effects of added operators to timeline elements can be viewed immediately. Furthermore, the video overlay of CLIPSTER provides safety areas that can be set to your liking and needs:

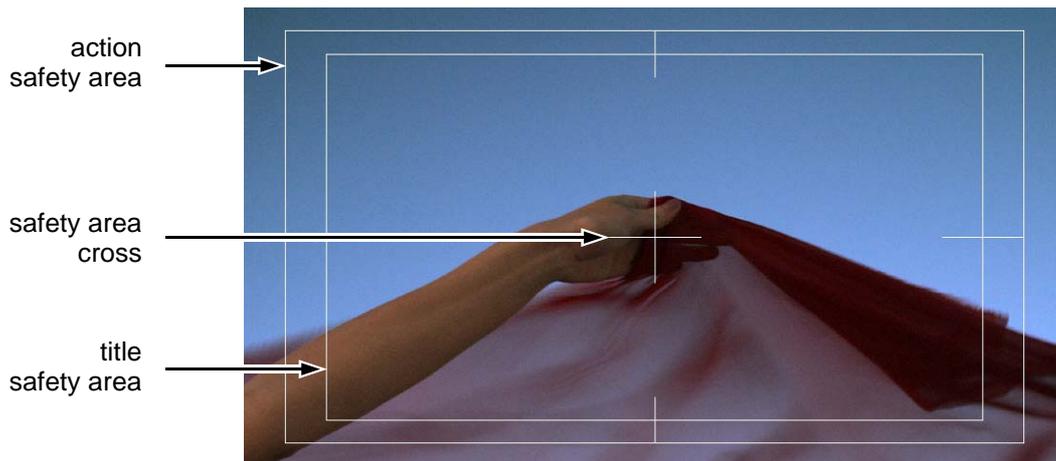


Figure 2-10: Video overlay safety areas

Via the group **Overlay** you can set up and configure the appearance of the overlay and its items.

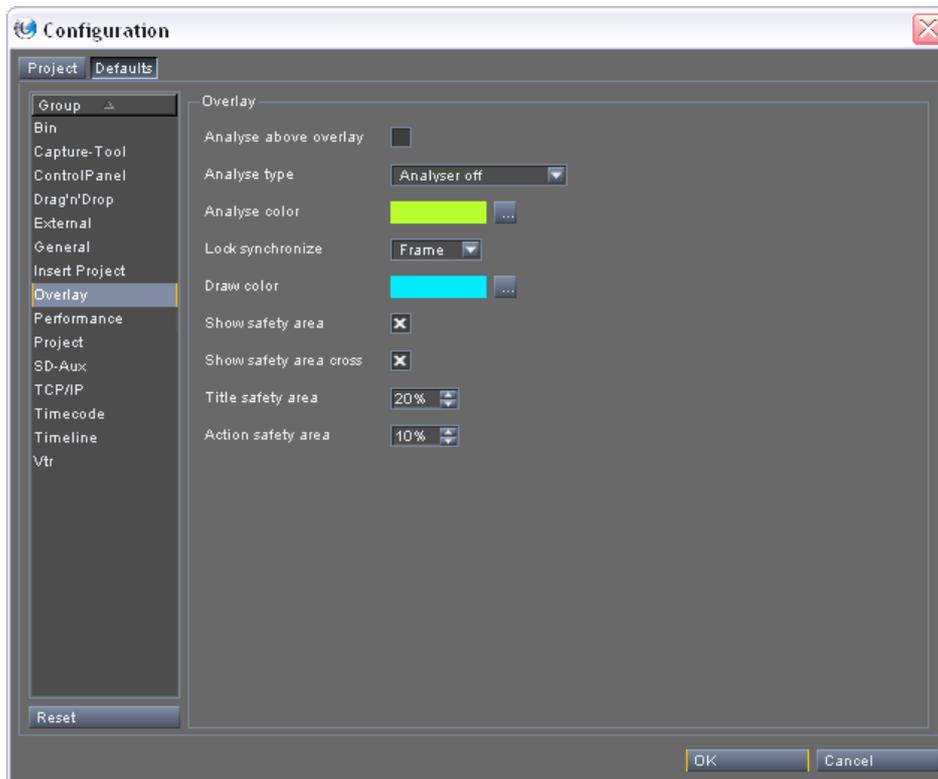


Figure 2-11: The settings items of the group 'Overlay'

In detail the settings pane with the group **Overlay** selected will show you the following items:

Analyse above overlay

The video overlay of the CLIPSTER Edit Tool provides video scopes to monitor the color and luminance within your project more closely. With this check box you can alter the layout of the video scopes. When it is deactivated, the scope and the overlay are displayed separately in the control area; when it is activated, the selected video scope will be superimposed on the video overlay. This setting provides the same feature as the **Above overlay** menu option on the context menu of the video overlay in the control area.



Analyse type

Select from this combo box the video scope that should be displayed in the control area of the CLIPSTER Edit Tool. The setting **Analyse off** deactivates the selected video scope. The video scopes can also be selected with the context menu of the video overlay. Further information about the video scopes can be found in the "CLIPSTER Edit Tool" user guide.

Analyse color

The setting **Analyse color** allows you to change the color of the data drawn in the graphs of the video scope. It shows you the color that is currently set. Right beside the field indicating the current color you can find a button (). A click on this button opens the standard window of the operating system to mix and change colors. With the help of this window set the color to your liking and confirm your selection with the **OK** button. Once your configuration settings are completed and confirmed, they will be in effect for the video scopes and the color of the drawn data will be changed.

Lock synchronize

For conforming reasons you can lock a clip in the source-edit mode of the control area of the CLIPSTER Edit Tool. With this locking you can synchronize the timeline cursor of the timeline with the scrub bar cursor of the bin clip. The way this synchronization is performed can be set with the combo box **Lock synchronize**:

Frame	Performs a synchronization of the frames. This is the recommended setting if both materials consist of the same frame rate.
Time	Synchronizes the time. This is the recommended setting if the frame rate differs between the clip from the bin and the material in the timeline.



Draw color	The setting Draw color determines the color of the safety areas as well as the color of the video scope's graphs. It shows you the color that is currently set for these items. Right beside the field indicating the current color you can find a button (). A click on this button opens the standard window of the operating system to mix and change colors. With the help of this window set the color to your liking and confirm your selection with the OK button. Once your configuration settings are completed and confirmed, they will be in effect for the video scopes and the safety areas.
Show safety areas	If the Show safety areas check box is activated, the title and the action safety area are visible in the video overlay of the CLIPSTER Edit Tool.
Show safety area cross	If this check box is activated, the safety area cross is visible in the video overlay of the CLIPSTER Edit Tool.
Title safety area	<p>This value indicates the distance from the title safety area line to the edge of the video overlay in percent. To change it either enter a new value or use the controls to the right of this field to step the value up or down.</p> <p>Notation: In percent</p> <p>Default value: 20%</p>
Action safety area	<p>This value indicates the distance from the action safety area line to the edge of the video overlay in percent. To change it either enter a new value or use the controls to the right of this field to step the value up or down.</p> <p>Notation: In percent</p> <p>Default value: 10%</p>

2.5.9 The Group 'Performance'

With the group **Performance** you can specify certain settings regarding the general performance of the CLIPSTER video system. Due to the fact that the performance monitor of the tool area of CLIPSTER is also concerned with the performance of the system in general, this group also includes settings that configure this tool.



Further information about the performance monitor can be found in the "CLIPSTER Edit Tool" user guide.

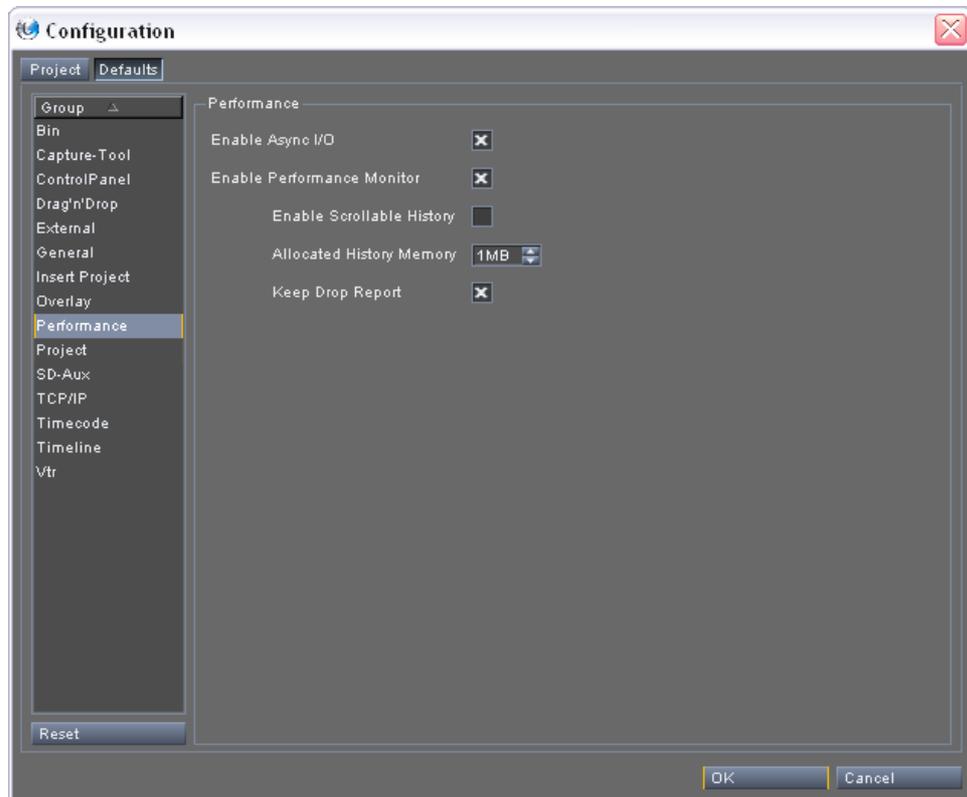


Figure 2-12: The settings items of the group 'Performance'



Here the following settings items can be found:

Enable Async I/O

CLIPSTER is able to process several different image files simultaneously (multi-threaded I/O mode) and with this check box you can enable or disable the multi-threaded I/O mode. If it is activated, the multi-threaded I/O mode is enabled and CLIPSTER will process several different files simultaneously during a real-time operation. If it is deactivated, the software is switched to the single-threaded I/O mode and each file will be processed one by one.



This setting is a system setting and you have to close and start the CLIPSTER software to bring a change of it into effect. Furthermore, it is valid for the CLIPSTER software in general and therefore available on the tab **Defaults** only.

Switching the CLIPSTER software to the single-threaded I/O mode may lead to a loss of performance, especially when working with higher data rates. For performance reasons it is recommended to enable the multi-threaded I/O mode.

Enable Performance Monitor

This setting enables the performance monitor of the CLIPSTER software. When the chart of the performance monitor or its status bar shows the message 'Performance Monitor disabled', it is deactivated and most of the control items will be disabled as well. To use the performance monitor you have to enable it first by activating this check box.

Enable Scrollable History

With this check box you activate the history mode of the performance monitor. Then you will be able to scroll back in the chart via the slider to the right-hand side of the performance monitor's chart controls.



Allocated History Memory

After enabling the check box for the history mode of the performance monitor, you can determine the amount of data that should be available for a history view with this setting. Once the total allocated amount of memory for the history mode is full with data, the earliest stored values will be overwritten and no longer be available for a view. To change this value either enter a new one or use the controls to the right of this field to step the value up or down.

Notation: Integer in megabytes

Default value: 1 MB

Keep Drop Report

This check box determines whether the drop report written by the performance monitor during the starting of the software should be kept after the software is shut down. If it is activated, the drop report detailing every occurring drop will still be available after the software is closed (only the last ten files will be kept). If it is deactivated, the drop report will be deleted automatically when the CLIPSTER software is shut down.

2.5.10 The Group 'Project'

The group **Project** contains settings referring directly to the respective project and project file.

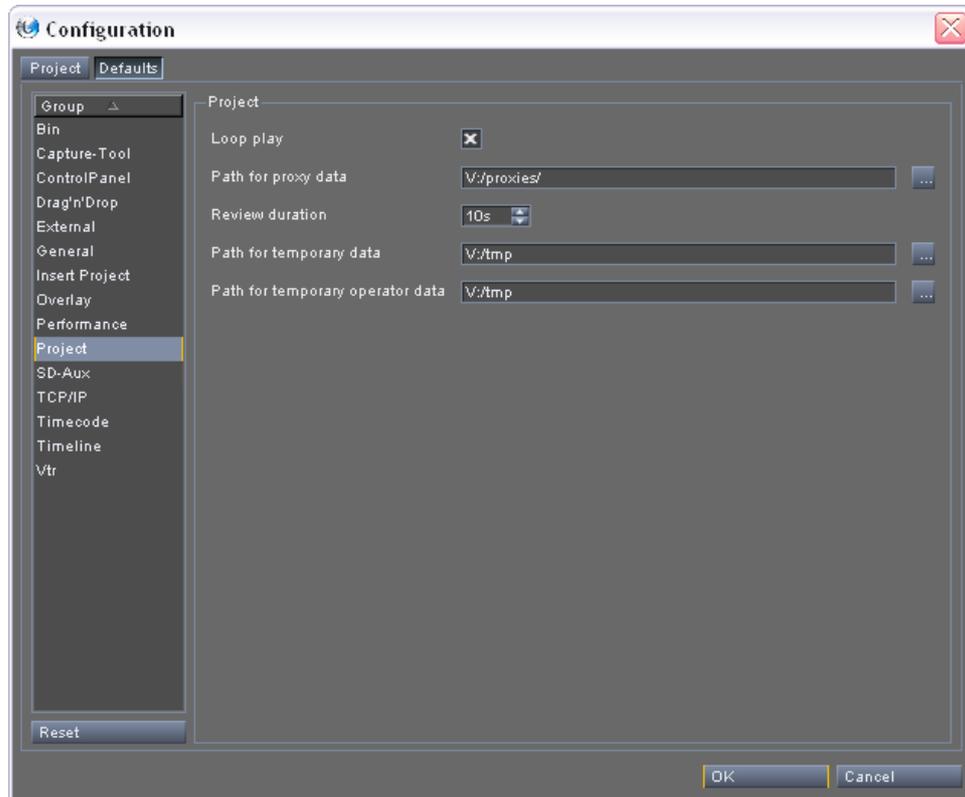


Figure 2-13: The settings items of the group 'Project'

Here the following settings items are located:

- Loop play** When activated, the play-out will be performed repeatedly, i.e. once the end of the clips in the timeline is reached, the play-out starts anew from the beginning of the timeline (when the timeline's in- and outpoint are set, it will occur between the in- and outpoint).
- Path for proxy data** When working with proxies, the down-scaled material of the high-resolution clip will be stored in this location. It will be saved project specific in a project file. Therefore, it is possible to save the proxy data in a different path for each project.

The path can be entered either relative, i.e. a path that will be located within the **System base video directory**, or absolute (see section “Notes on Directory Paths” on page 2). Either type in the path in the respective entry field or click on the button to the right () to select a path directly via the opening dialog window.



In order to identify the proxies easily that belong to one project, it is strongly recommended to use a project based saving of your proxy data, i.e. adjust this path for each project anew if you are working with proxies.

Notation and Example: See section “Notes on Directory Paths” on page 2.

Default value: `v:\proxies`

Review duration

The CLIPSTER Edit Tool provides a review function that plays around the current position of the timeline cursor in a loop, for example, to evaluate the effect of operators. With this item you can set the total duration that this review should provide. To change it either enter a new value (in seconds) or use the controls to the right of this field to step the value up or down.

Notation: In seconds

Path for temporary data

When a prerendering of timeline elements is needed, the temporary data necessary for these elements, i.e. the prerendered images, will be stored in this location. The setting will be saved project specific in a project file. Therefore, it is possible to save the temporary data in a different path for each project.

The path can be entered either relative, i.e. a path that will be located within the **System base video directory**, or absolute (see section “Notes on Directory Paths” on page 2). Either type in the path in the respective entry field or click on the button to the right () to select a path directly via the opening dialog window.



In order to identify the prerendered files easily that belong to one project, it is strongly recommended to use a project based saving of your temporary data, i.e. adjust this path for each project anew if your project depends on prerendered files.

Notation and Example: See section "Notes on Directory Paths" on page 2.

Default value: `v:\tmp`

Path for temporary operator data

In this directory path all temporary files that the CLIPSTER program needs in general will be stored. For example, it will be used to store files necessary for CLIPSTER to make certain operators (transitions) real-time capable (transition control files with the extension `*.ctrl`).

This path can be entered either relative, i.e. a path that will be located within the **System base video directory**, or absolute (see section "Notes on Directory Paths" on page 2). Either type in the path in the respective entry field or click on the button to the right () to select a path directly via the opening dialog window.

Notation and Example: See section "Notes on Directory Paths" on page 2.

Default value: `v:\tmp`

2.5.11 The Group 'SD-Aux'

The CLIPSTER video system provides an auxiliary SD video signal output that sends out the video signal in SD at all times regardless of the setting of the video format. This SD output can be configured with the group **SD-Aux** of the Configuration Tool .



The images provided at the auxiliary SD output are in a quality sufficient for an offline-editing. For high-end SD quality it is best to use the main video output ports of CLIPSTER.

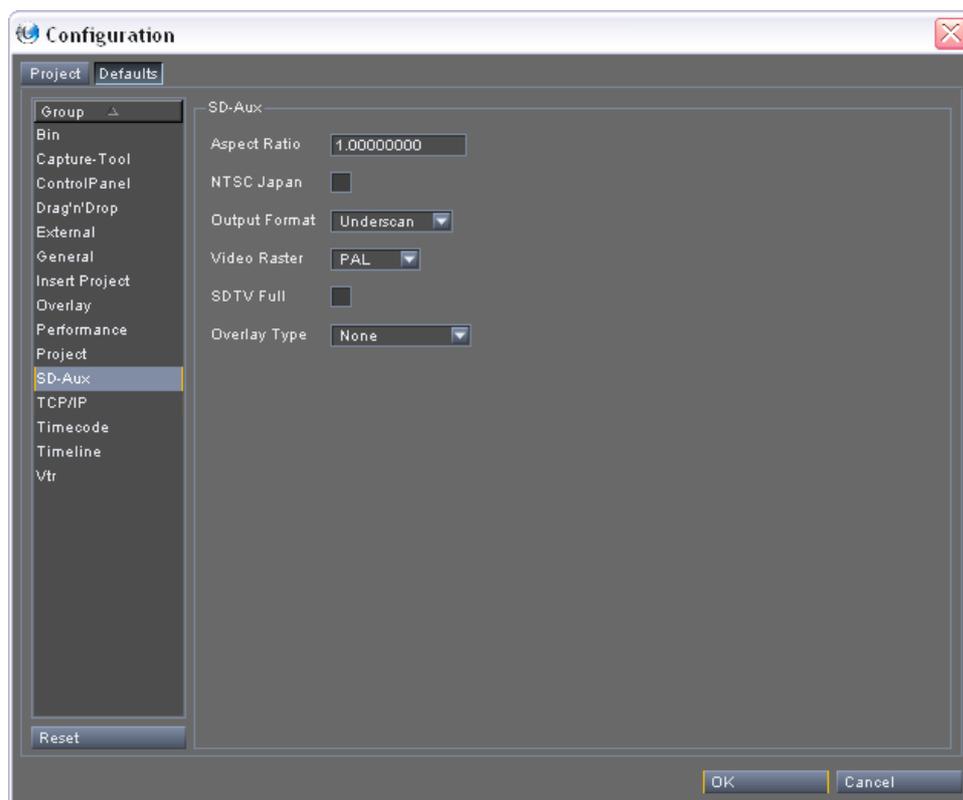


Figure 2-14: The settings items of the group 'SD-Aux'

The settings pane of this group provides the following items:

Aspect Ratio

If the SD signal comes out distorted in a certain way, e.g. anamorphic, its aspect ratio can be adjusted with this setting. To alter it simply type in the respective aspect ratio calculated relatively from the standard SD aspect ratio, i.e. 4:3 = 1.

Notation: Floating point

Example: 1.6666667



NTSC Japan

The NTSC video format for Japan differs slightly from the one used in the USA. It provides a small voltage offset for the black level (sometimes called 'setup' or 'pedestal'). Usually, SD monitors react indifferent to this offset, but some may be sensitive to it. Then you can switch on or off the offset with this check box.

Output Format

This setting changes the appearance of the given out SD signal. Its output depends to a large extend on the selected video output format (HD/SD/NTSC/PAL):

Underscan In order not to conceal any image details by superimposing additional information (e.g. timecode) over the images at the SD output, the images are displayed in the upper part of the screen allowing for sufficient space below them to display the additional information.

Letterbox With this setting the image gets centered at the SD output and black bars are added to the video output, showing it in a letterbox format.

Anamorph When a video output format is selected other than an SD format, the output can be displayed anamorphic with this setting.

Video Raster

This combo box switches the SD output between a PAL and NTSC video signal.

SDTV Full

When the video output format is set to an SD video format, the images displayed at the auxiliary SD output are much smaller due to an accommodation of all available video formats up to 2K at the SD output. With the check box **SDTV Full** you can change this and display the images in full instead so that they fill out the screen. This setting works together with an SD output format only, and overwrites then all other settings configured in this group (e.g. the aspect ratio settings).

Overlay Type

With this combo box you can select additional information that the SD image should provide at the auxiliary SD output. The information will be displayed at the bottom of the screen and the following settings are possible:

None	No additional information are displayed.
Timecode	Displays the timecode information. To the left you can find the relative timeline timecode of CLIPSTER while to the right the timecode given out via LTC is displayed (see setting Output LTC in section "The Group 'Timecode'" on page 60).
TC + Key-code	Shows the timecode as well as the keycode information. The keycode will be shown below the timecode information in the following format: <code><manufacturer ID and film type><6 digit prefix> <count>+<offset></code>



Currently only the *.dpx file format is able to provide such complex information as time- and/or keycode via its file header.



2.5.12 The Group 'TCP/IP'

With the group **TCP/IP** you configure the CLIPSTER video system for its usage in a network.

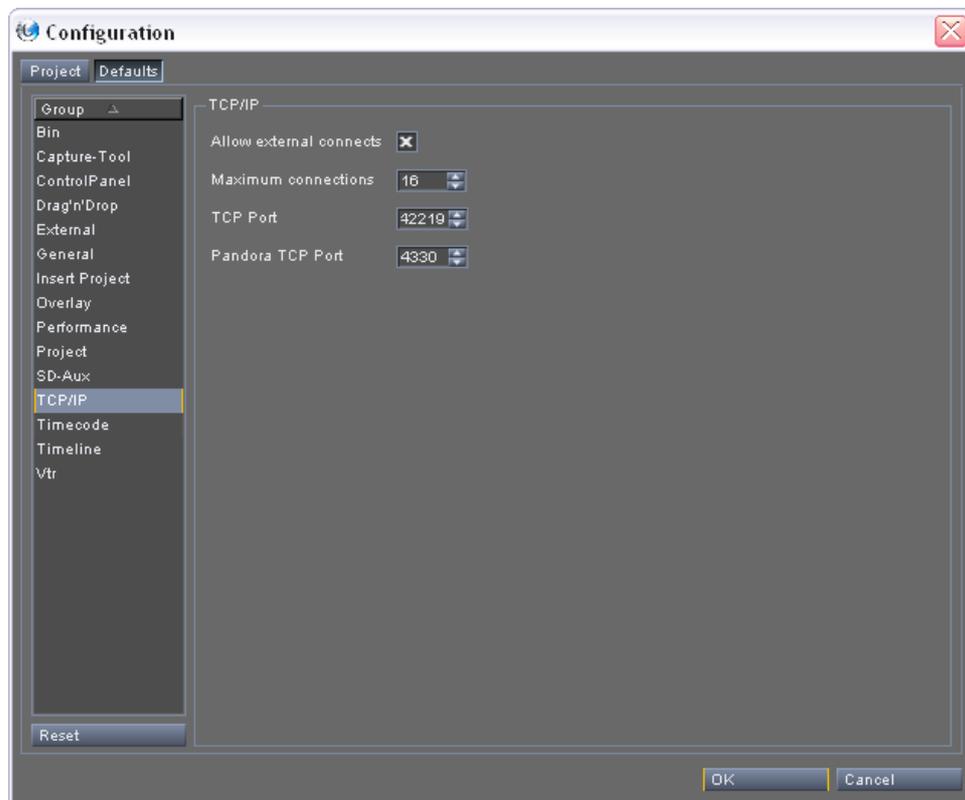


Figure 2-15: The settings items of the group 'TCP/IP'

This group provides the following settings items on the settings pane:



To put changes to the **TCP/IP** group into effect, you have to exit and restart the CLIPSTER software.

Allow external connects With this check box you enable the external network connection for CLIPSTER. Then the CLIPSTER software can be connected, for example, from a third-party color grader or other workstations (e.g. via a terminal).

Maximum Connections The **Maximum connections** setting specifies the maximum number of connections (including local connections) that CLIPSTER will allow at a time.



TCP Port

This item specifies the standard TCP port that the CLIPSTER application should use in a network. Then you can connect to the CLIPSTER application and control it via certain commands (see section “Using CLIPSTER in a Network” on page 121). This setting should be entered as a 16 bit integer number. Either type in the port manually or use the controls to the right of this field to step the value up or down.

Notation: 16 bit integer number

Default value: 42219

Pandora TCP Port

The **Pandora TCP Port** resembles the standard **TCP Port** setting. It specifies the port that the CLIPSTER application should use when working together with a Pandora color grader. For this the Pandora system has to be connected to CLIPSTER via a network. Then the color grader will be able to control the CLIPSTER software via this port and send the necessary commands to it to perform a color grading of your timeline material. This setting should be entered as a 16 bit integer number. Either type in the port manually or use the controls to the right of this field to step the value up or down.

Notation: 16 bit integer number

Default value: 4330



2.5.13 The Group 'Timecode'

The **Timecode** group provides settings to configure all timecode related features such as switching between timecode and frame notation for the timeline scale and entry fields or defining a special timecode offset.

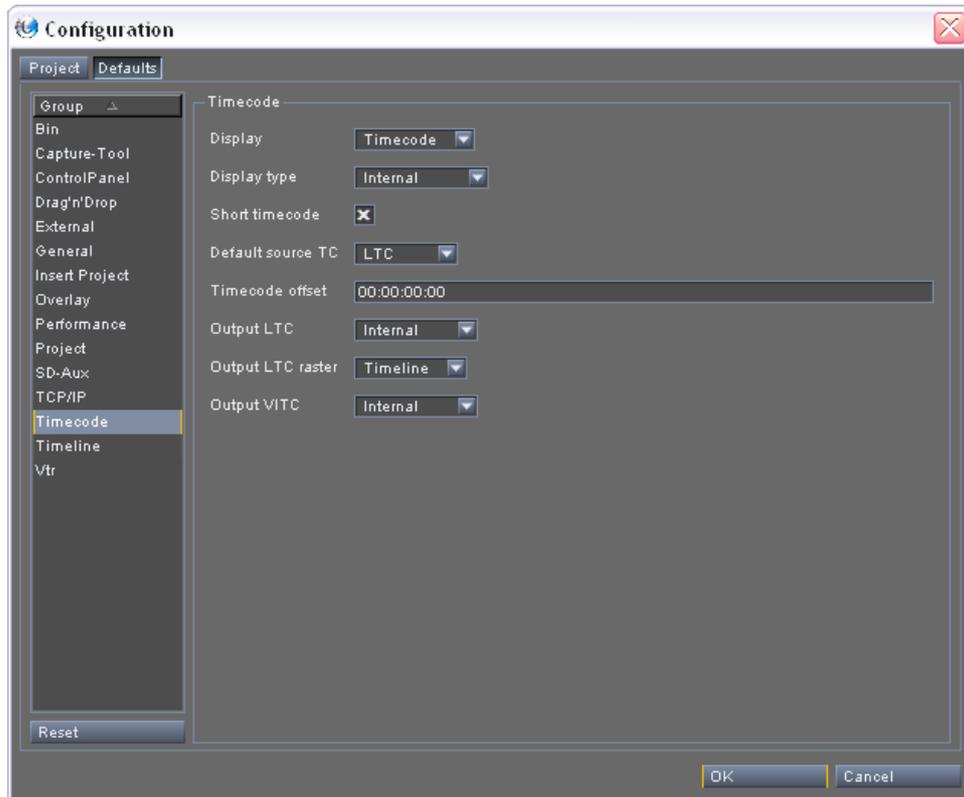


Figure 2-16: The settings items of the group 'Timecode'

On the settings pane of the **Timecode** group you can find the following items:



CLIPSTER supports the storage of timecode information within a file's header when allowed by the file format. However, of all file formats supported by the CLIPSTER software, currently only the *.dpx file format is checked for and provided with source timecode information.

Display

With this setting you can switch between a timecode and frame notation for the CLIPSTER software. For example, if **F**rames is selected, at all appropriate places the frame information is displayed instead of the timecode information.



If as a display type `Source TC` is selected, the frame information viewing for the timeline has no effect on the source timecode displayed by the clips, i.e. you will still see the respective source timecode of the clips.

Display type

The setting **Display type** changes the way the position information is displayed by the clips in the timeline of the CLIPSTER Edit Tool.

- `Internal` The internal timecode of the CLIPSTER Edit Tool's timeline is used.
- `Source TC` With this setting the clips in the timeline of the CLIPSTER Edit Tool use the timecode provided by the header of the file (source timecode) and set either via the Configuration Tool of CLIPSTER (setting **Default source TC**) or the clips' properties (see chapter "Bin Clip Properties" on page 95).
- `File number` With this setting the clips in the CLIPSTER Edit Tool's timeline will show you the number of the respective image file, e.g. the image `img00231.dpx` as the starting point of the clip will be shown with 231.



This setting performs the same operation as the display type combo box available in the timeline area of the CLIPSTER Edit Tool.

Short timecode

With this check box you can set whether the CLIPSTER Edit Tool should use an abbreviated timecode. If enabled, the software will show wherever appropriate a shorter timecode version only (consisting at least of frames and seconds), i.e. the minutes, hours, etc. will be left out when zero.



Default source TC Some file formats for clips are capable of storing timecode information. These source timecodes can then be used in the timeline of CLIPSTER. However, when recording clips via the CLIPSTER I/O Tool, the software will write far more timecode information into the file header than usually supported by other applications. When processing these clips with the CLIPSTER software again, you can select between the different timecodes provided by a clip. The source timecode that CLIPSTER should use by default for such a clip when its properties are set to `Global default` (see chapter “Bin Clip Properties” on page 95) can be set with the combo box **Default source TC**. Select from it the source timecode that the clips should provide. When the source timecodes in the clips’ properties are set to `Global default`, you can change the settings for all clips present in the CLIPSTER software in one step with the combo box **Default source TC**. It can be changed even after they were added to the timeline.

Generic	Uses the source timecode information written to the correct location in the file header that is especially reserved for that kind of meta data, i.e. the standard source timecode that will be provided by the file.
LTC	Uses the longitudinal time and control code written to a R&S DVS proprietary location within the file’s header.
VITC	Uses the vertical interval time and control code written to a R&S DVS proprietary location within the file’s header.
VITC2	Uses the VITC of the odd field that was written to a R&S DVS proprietary location within the file’s header. This setting may be useful when processing interlaced material.



DLTC	Uses the digital LTC written to a R&S DVS proprietary location within the file's header. This data is usually transmitted via ANC.
DVITC	Uses the digital VITC written to a R&S DVS proprietary location within the file's header. This data is usually transmitted via ANC.
DVITC2	Uses the digital VITC of the odd field that was written to a R&S DVS proprietary location within the file's header. This data is usually transmitted via ANC and may be useful when processing interlaced material.
VTRTC	Uses the timecode that was sent through the remote connection of an external player, such as a VTR. This data is usually transmitted via RS-422 and written to a R&S DVS proprietary location within the file's header.
Virtual	If the clip does not provide a source timecode of its own, you can set it to show a virtual source timecode with this setting. In this case the specified offset of the source timecode will be given back as its source timecode which is a setting of the clip's properties (see section "The Video Settings" on page 102).

Timecode offset

If your project needs an offset to match, for instance, with other projects, enter the offset in standard timecode notation here. The timeline of the CLIPSTER Edit Tool, for example, will then provide this timecode offset.



This setting is valid for an output of video data as well as for a record, for example, when CLIPSTER is controlled in slave mode via RS-422.

Furthermore, this setting provides the same function as the **TC - Start** setting of the video format settings window (see section “The Video Format Details” on page 84). When adjusting the **Timecode offset** setting, the setting in the video format window will be adjusted as well and vice versa.

Notation: hh:mm:ss:ff

Example: 01:34:05:22

Output LTC

Specifies whether the relative timeline timecode or the source timecode provided by the file should be output via the LTC connector. The type of source timecode to be output can be selected freely either via the Configuration Tool of CLIPSTER or the properties of clips in the bin. See also setting **Display type** above.

Output LTC raster

This setting switches the LTC output of the hardware between the timeline timecode and the timecode of the auxiliary SD output. This way you can give out the timeline set, for example, to 24p with another timecode. However, for this only the timecode of the SD-Aux output is available.

Timeline Provides the set timeline timecode at the LTC output.

SD-Aux Provides the timecode of the auxiliary SD output at the LTC output.

Output VITC

Specifies whether the relative timeline timecode or the source timecode provided by the file should be output together with the video signal. The type of source timecode to be output can be selected freely either via the Configuration Tool of CLIPSTER or the properties of clips in the bin. See also setting **Display type** above.

2.5.14 The Group 'Timeline'

With the **Timeline** group you configure settings valid for the timeline of the CLIPSTER Edit Tool. With them you can, for example, alter the appearances of items on the timeline or configure its general behavior, e.g. when performing a trimming or when working with vertical editing.

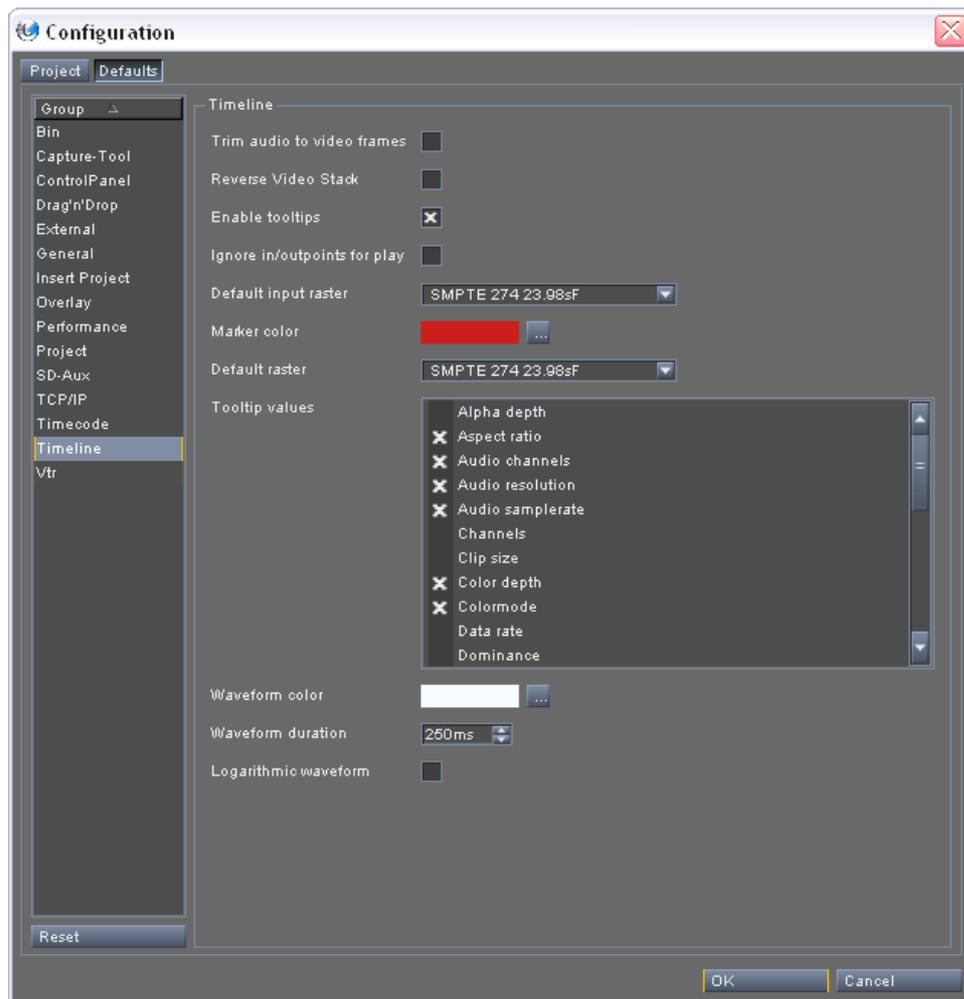


Figure 2-17: The settings items of the group 'Timeline'



In detail the group **Timeline** provides the following settings items:

Trim audio to video frames Whilst the smallest unit of a video clip is a single frame, the smallest unit of an audio clip is a sample. CLIPSTER provides up to 48,000 samples per second of audio (48 kHz) opposed to the respective video frequency setting (frames per second) for the video output. Instead of trimming audio clips in the timeline in samples, if this setting is enabled, you can trim the audio clips in frames.

Reverse Video Stack With the timeline area of the CLIPSTER Edit Tool configured to several video tracks you can perform a vertical editing in the timeline. Usually, the video tracks are displayed with the track of the highest number at the top of all tracks. When this check box is activated, the display of the video tracks can be reversed. Then the track with the lowest number will be shown at the top.



Reversing the display of the timeline tracks does not affect the play-out priority, i.e. the priority of the video track with the highest number over all others.

Enable tooltips Clips added to the timeline of the CLIPSTER Edit Tool provide various information via tooltips. With this check box you can activate or deactivate the display of the tooltips when the mouse cursor is placed over a clip in the timeline area. If the check box is enabled, the tooltips are activated, otherwise they are deactivated.



This setting provides the same function as the **Enable tooltip** menu option on the context menu of a clip in the CLIPSTER Edit Tool's timeline.

Ignore in/outpoints for play With this check box you can specify the way a play-out of the CLIPSTER Edit Tool's timeline is performed. If it is activated, the timeline will always be played out in full despite of a set in- and outpoint for the timeline. If it is deactivated, the in-/outpoint will be heeded and a play-out occurs between the in- and outpoint only.



- Default input raster** With this setting you can determine the input raster that the CLIPSTER I/O Tool will use for a record of video signals by default when a new project is initialized.
-  This setting is valid for the CLIPSTER software in general and therefore available on the tab **Defaults** only.
- Marker color** The setting **Marker color** allows you to change the color of the timeline markers that can be used in the CLIPSTER Edit Tool. It shows you the color that is currently set for the markers. Right beside the field indicating the current color you can find a button (■). A click on this button opens the standard window of the operating system to mix and change colors. With the help of this window set the color to your liking and confirm your selection with the **OK** button. Once your configuration settings are completed and confirmed, they will be in effect for the timeline and the marker color will be changed.
- Default raster** With this setting you can determine the output raster that the CLIPSTER software will use by default when a new project is initialized.
-  This setting is valid for the CLIPSTER software in general and therefore available on the tab **Defaults** only.
- Tooltip values** In the list box **Tooltip values** select the information that should be displayed by the tooltips of the CLIPSTER Edit Tool when the mouse cursor is placed over a clip in the timeline.
- Waveform color** The setting **Waveform color** allows you to change the color of the waveforms displayed by the audio clips present in the timeline of the CLIPSTER Edit Tool. It shows you the color that is currently set for the waveforms. Right beside the field indicating the current color you can find a button (■). A click on this button opens the standard window of the operating system to mix and change colors. With the help of this window set the color to your liking and confirm your selection with the **OK** button. Once your configuration settings are completed and confirmed, they will be in effect for the timeline and the waveform color will be changed.

Waveform duration When dragging an audio clip to the control area of the CLIPSTER Edit Tool (i.e. to the source-edit mode of the control area), it will be shown in the video overlay to the left with the first part of its waveform. The length (duration) of the waveform's section displayed here can be configured freely with this setting.



The waveform display is not visible when performing a play-out of the audio bin clip.

Logarithmic waveform This check box enables or disables the logarithmic display of audio waveforms in the CLIPSTER Edit Tool. When it is enabled, low and quiet parts of the audio clip will be displayed more distinctly by the waveforms, i.e. the waveforms show higher peaks although the audio is faint. If it is disabled, the waveforms are displayed in their linear view.

2.5.15 The Group 'VTR'

The group **VTR** deals with settings related to a video tape recorder (VTR) or other devices connected via RS-422. With CLIPSTER you can control such devices by remote, for example, as a play-out source while recording with the CLIPSTER I/O Tool. Via the VTR settings you can determine – for each detected device type separately – what edit lag and preroll time the CLIPSTER software should observe. These parameters will then be used during an RS-422 operation for this device. Furthermore, with this group you can set up the CLIPSTER system for a multi-device operation, enable the mixer function for color graders or adjust the given back timecode when CLIPSTER is in its slave mode.



This group is valid for the CLIPSTER software in general and is therefore available on the tab **Defaults** only.

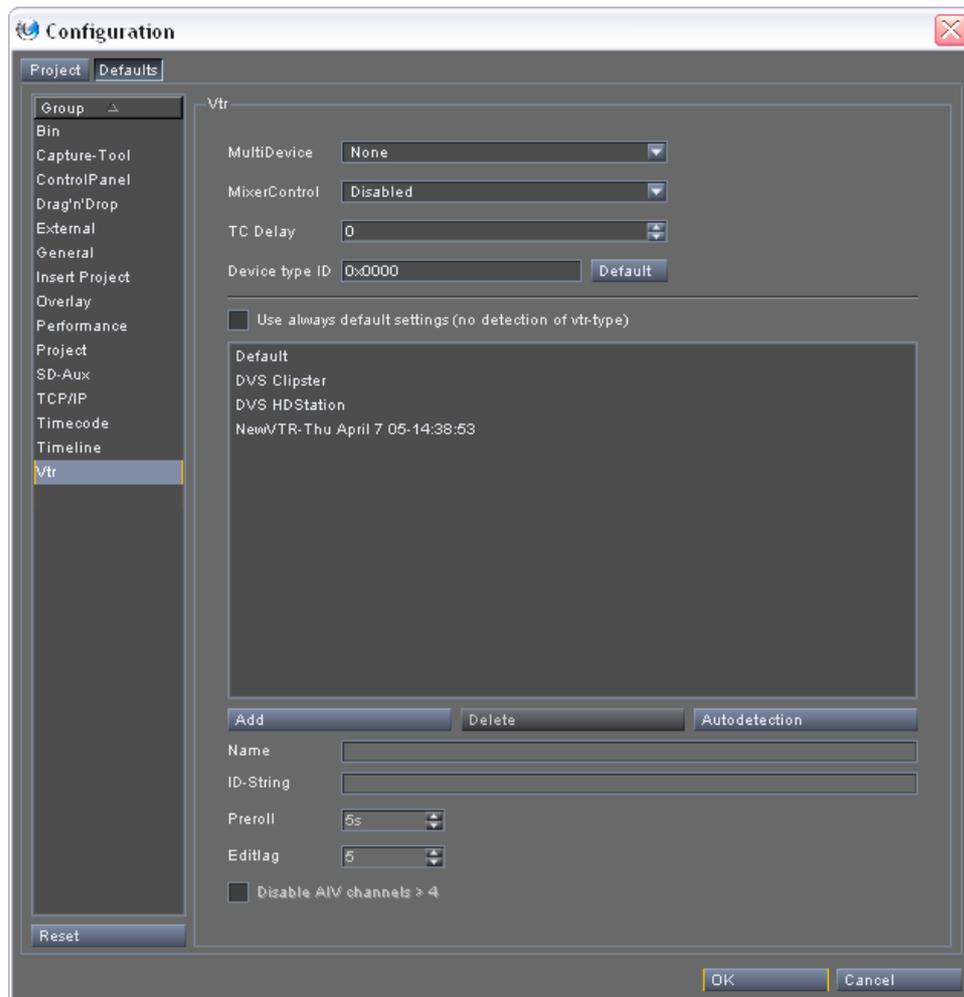


Figure 2-18: The settings items of the group 'VTR'

The following settings explanations are divided into the different applications where the settings can be applied. These are:

- Multi-device operation
- Using the mixer function for color graders
- CLIPSTER in slave mode
- CLIPSTER as master

Multi-device Operation

The CLIPSTER video system can be set to operate in a multi-device operation mode, either as a master or as a slave. With this mode you can control several CLIPSTER or Pronto2K / ProntoHD video systems manufactured by R&S DVS at once.



The multi-device operation mode is an optionally available feature of CLIPSTER. Depending on the ordered options for your CLIPSTER video system, it may not provide the multi-device capability.

Further information about the multi-device operation mode and its setup can be found in section “The Multi-device Operation Mode” on page 112.

The following settings item is concerned with the multi-device operation mode:

MultiDevice	This setting prepares the CLIPSTER system for the multi-device operation mode. The following settings are available:
None	The multi-device operation mode is disabled.
Master	The CLIPSTER software and video system will act as the master during the multi-device operation. For this CLIPSTER has to be controlled by an RS-422 control panel.
Slave	The CLIPSTER software and video system act as a slave in the multi-device operation and follow the commands of the master device.



To bring the selected multi-device operation mode into effect, each CLIPSTER system (master as well as slaves) has to be in its slave mode, i.e. the **SLAVE MODE** buttons of the software have to be activated. The slaves will be controlled by the master, while the master has to be controlled by an RS-422 control panel.

Mixer Function for Color Graders

The CLIPSTER video system allows you to facilitate your work when using certain third-party color graders. Then you can switch the output signal between the incoming video signal and the material present on the hard disk array of CLIPSTER.



The mixer function of CLIPSTER is an optionally available feature. Depending on the ordered options for your CLIPSTER video system, it may not provide the mixer functionality for color graders.

Further information about the mixer function and its setup can be found in section “Mixer Function for Color Graders” on page 120.

The following settings item is concerned with the mixer function:

MixerControl This setting enables or disables the mixer function of CLIPSTER.

CLIPSTER in Slave Mode

When CLIPSTER is controlled by another device via RS-422, you can adjust the timecode returned by CLIPSTER and its device ID with the following settings:

TC Delay This setting adjusts the timecode that will be sent back by the CLIPSTER video system via the RS-422 connection. It will be used when the CLIPSTER software is in its slave mode, i.e. when the **SLAVE MODE** button in the CLIPSTER user interface is activated. Then you can account with the setting **TC Delay** for a timecode response sent by CLIPSTER that the master device incorrectly detects as slightly off.

Notation: In frames

Min./max.: -3/+3

Default value: 0



Device type ID

The device ID sent out by CLIPSTER can be set and altered with these items. In the entry field you can type in any ID that the CLIPSTER video system should give out to the master device.

Notation: 2 bytes hexadecimal number



In order to be recognized correctly the number has to be preceded by 0x indicating that it is a hexadecimal number.

If the entry field shows 0x0000, CLIPSTER uses its own IDs which are as follows:

0xf038	Used when video raster is set to 30 Hz (NTSC)
0xf138	Used when video raster is set to 25 Hz (PAL)
0xf238	Used when video raster is set to 24 Hz (film)

After altering the device ID in the entry field to a customized ID, you can at any time restore the default IDs of CLIPSTER with the button **DEFAULT** to the right. Afterwards the entry field will provide the setting 0x0000 again.

CLIPSTER as Master

With CLIPSTER you can control other devices connected via RS-422 by remote, for example, as a play-out source while recording with the CLIPSTER I/O Tool. With the following settings you can define with the help of device profiles what edit lag and preroll time the CLIPSTER software should observe for each detected device. These parameters will then be used during an RS-422 operation for this device.

Once the CLIPSTER software is started, it will automatically detect any newly connected external device because via its RS-422 connection it receives an ID indicating the type of the external device. All commonly known external devices can be detected and their name as well as parameters will then be set accordingly in the profile list box. This usually takes place in the background of the system: CLIPSTER searches in certain intervals for previously not connected external devices, and as soon as a such a device is detected by CLIPSTER, its profile will be added to the settings explained further below with the type of the external device as its name. Additionally, the parameters will be set accordingly and correctly for this device. However, if CLIPSTER does not recognize the external device, a profile will be created carrying a default name (i.e.



'NewVTR-<Date and Time of Detection>') and then standard values will be set and used for this device.



Additional information and explanations about edit lag and pre-roll can be found in section "VTR Settings" on page 18.

The following settings items are available to manually administer the automatically created profiles:

- Use always default settings** When this check box is activated, the CLIPSTER video system will always apply the profile 'Default' to all connected external devices. None of the already known and entered profiles will be used and they will appear dimmed when this option is enabled. Furthermore, with this setting enabled, an automatic detection of external devices is turned off.
- List box In the list box you can see a list of all already defined and specified external devices. Each entry in this box represents one device type. Select from this list box one entry, for instance, to change its settings or to delete it.
- ADD** The button **ADD** creates a new device profile with the default name 'New VTR'. It will be added to the list box above and the specification items below the buttons become available to set the necessary profile parameters.
- DELETE** With the button **DELETE** you can delete an already defined external device from the list box. Simply select an entry from the list box and press this button to delete it.
- AUTODETECTION** When in doubt about the external device that is currently connected to the video system, you can use the button **AUTODETECTION**. It will mark the currently connected device in the list box and display its settings in the entry fields below.
- Name** With the entry field **Name** you can change the name of a device profile. This field will be available as soon as an entry is selected from the list box or a new one is added.
- ID-String** In this entry field you can enter or alter the device ID of a profile. Afterwards all devices that send out this ID will use this profile. The field will be available as soon as an entry is selected from the list box or a new one is added.
- Notation: 2 bytes hexadecimal number



In order to be recognized correctly the number has to be preceded by 0x indicating that it is a hexadecimal number.

Example: 0xf037

Preroll

With this setting you can adjust the time that the connected external device, e.g. a VTR, needs to bring itself to the correct speed for the operation to be performed (usually speed 1). It is a characteristic of the external device that can be found in its technical details. To change it either enter a new value (in seconds) or use the controls to the right of this field to step the value up or down.

Notation: In seconds

Example: 5s

Editlag

This value is a characteristic of the connected external device, e.g. a VTR, that can be found in its the technical details. Enter in this field the edit lag of the device. To change it either enter a new value (in frames) or use the controls to the right of this field to step the value up or down.

Notation: In frames

Example: 7

Disable AIV channels > 4

Some external devices have difficulties when handling embedded audio that provides more than four audio channels. With this check box you can determine that CLIPSTER will give out only four audio channels embedded in the video signal.

This setting provides almost the same functionality as the AIV (audio in video) setting of the video format output settings (see section "The Additional Configurations" on page 89). However, where the video format settings allow for a general configuration of the output only, with this setting you can configure the given out audio for each external device separately, i.e. when performing a master/slave operation with the CLIPSTER I/O Tool. If the check box is enabled, it will overrule the AIV configuration of the video format settings when set differently.

Video Format Settings

Setting the video format is for most works important and necessary. It is a function included in almost every module of the CLIPSTER software, e.g. in the CLIPSTER Edit Tool or the CLIPSTER I/O Tool. With it you are able to configure and determine the in- or output format (video raster) for a record or a play-out operation.


Once your new settings are confirmed, the in- or outputs of CLIPSTER will change their video format respectively. Additionally, depending on the selected video format the video overlay in the respective CLIPSTER software module may change its aspect ratio. Regardless of the video format settings the SD outputs of CLIPSTER provide at all times a standard definition video signal and can be used to monitor the output of the CLIPSTER software. They can be configured via the Configuration Tool of CLIPSTER (see section "The Group 'SD-Aux'" on page 55).




Rasters for film not included in the SDI standard (i.e. 2K with 20 Hz or more) can be output via the analog and DVI outputs only, while an input has to be performed via the DVI input.

This chapter explains the individual items of the window to set the video format in detail. Both windows will be described:

- the window that sets the video output format, as well as
- the window that sets the video input format.

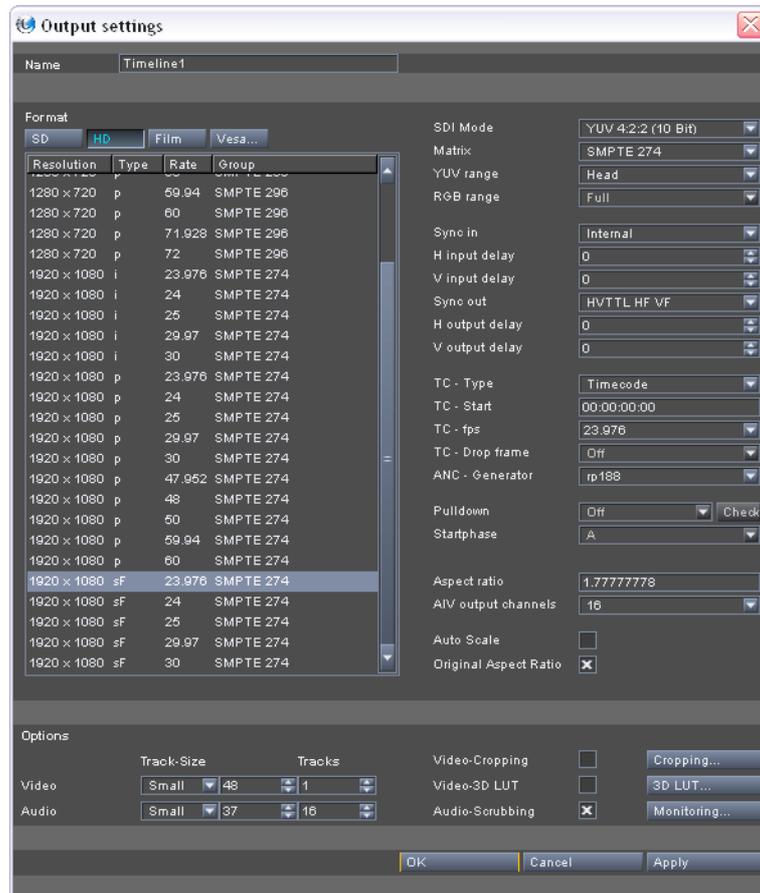

output settings window

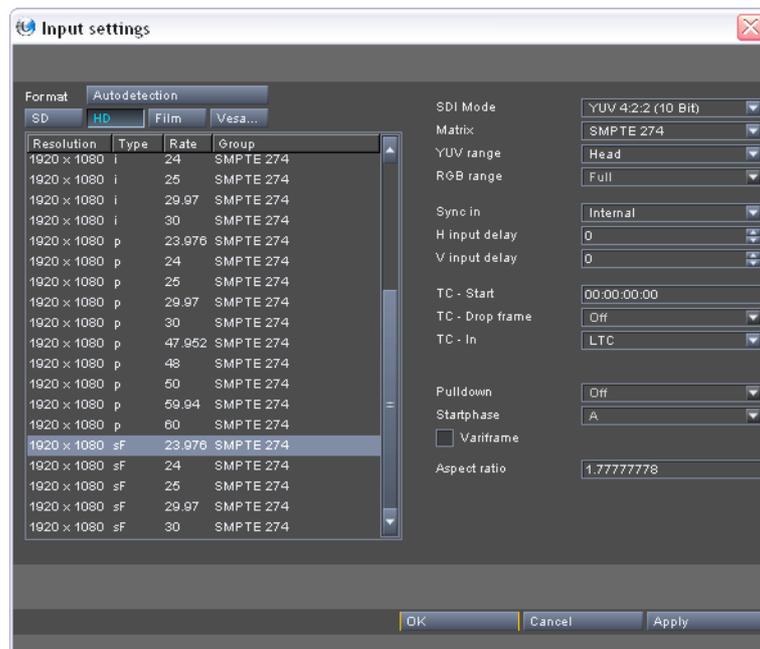

input settings window

Figure 3-1: Different windows to set a video format

As you can see the window to configure the video format for an input (e.g. as in the CLIPSTER I/O Tool) and the one to configure an output (e.g. as in the CLIPSTER Edit Tool) differ in some respect. However, because the settings items for an input of video signals will mostly be available in the video format window for an output as well, this section focuses on the items of the window as they appear when configuring the output format. Thus the items for an input of video signals will mostly be included.



The items that are exclusively available in the window to configure an input of video signals are explained separately in section “Special Items when Configuring the Input Format” on page 91.

The items of the **Options** area of the output video format window are not described in this user guide. Because exclusively concerned with the Edit Tool they are in detail explained in the “CLIPSTER Edit Tool” user guide.

There are customized video rasters optionally available for a CLIPSTER video system. In such a case you will be supplied with a `*.ref` file that has to be installed in the CLIPSTER installation path.



3.1 Basics

This section describes some basics regarding the video format settings. After a description how to access them an overview of its window is provided. This is followed by a description how to close and, if applicable, confirm the video format settings.

3.1.1 Accessing the Video Format Settings

The video format settings are available in almost every software module of CLIPSTER. They determine the format for the in- or outputs of CLIPSTER.

However, the different software modules of CLIPSTER, for example, the CLIPSTER Edit Tool or the CLIPSTER I/O Tool also provide different items to access the video format settings. Therefore, for more detailed information on how to access the video format settings in each module please refer to their respective user guides.

3.1.2 Overview

After accessing the video format settings in one of the software modules of CLIPSTER, either the following or a similar window will appear on the screen:

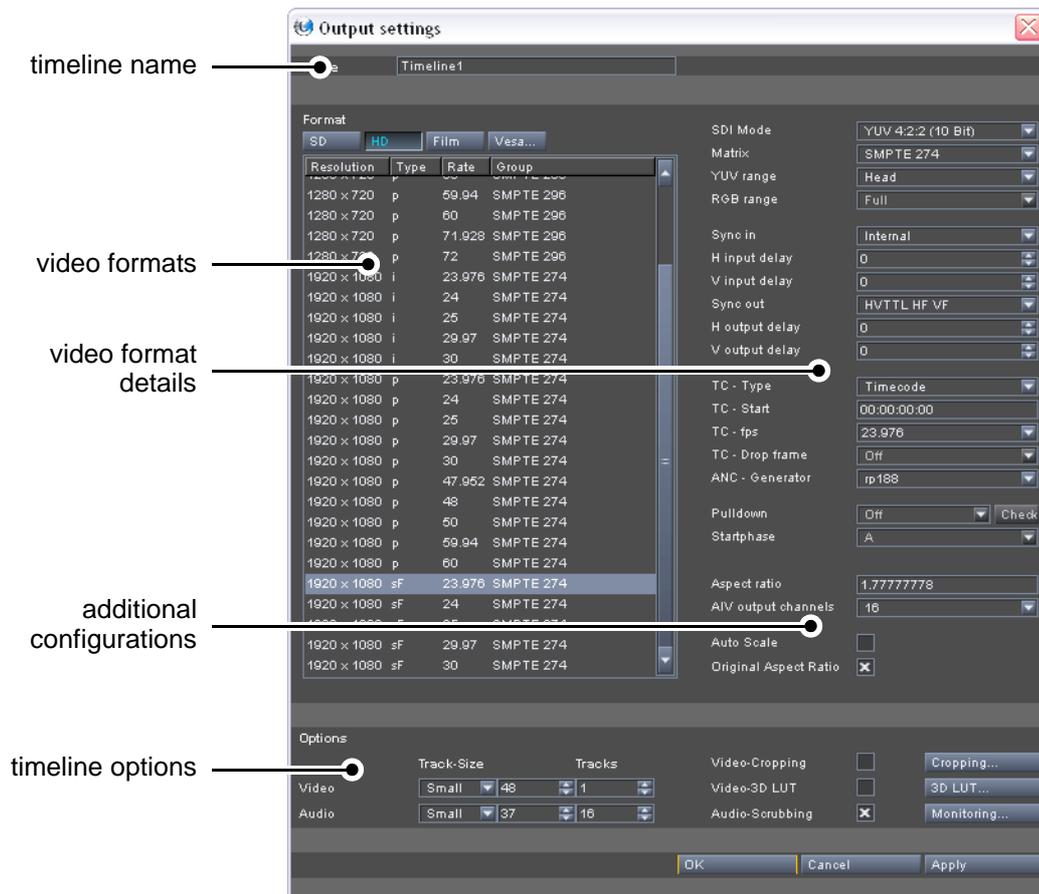


Figure 3-2: Window to set the video format settings

In this window you have to set the video format according to your needs. For example, if you want to view the material in the timeline with an externally connected monitor, you have to configure the output format of CLIPSTER to the setting of the monitor, or, when you want to record video material, the set video format has to match the incoming signal, i.e. it must be configured to the same format and raster as the incoming signal.



In detail the window to set the video format contains the following items:

timeline name	To assign a timeline name to a timeline is necessary when you want to control CLIPSTER via a network (see section “Using CLIPSTER in a Network” on page 121).
video formats	On the left side of the video format settings window you can find buttons and a list box to select one of the various video formats that the CLIPSTER video system provides. With the buttons choose one of the video format types that you would like to have displayed in the list box. Then select in the list box the desired video format from the predefined ones.
video format details	With the video format details you can specify your video format selection further. For this the window to set the video format provides several combo boxes and entry fields where you can set, for example, the synchronization or time-code details.
additional configurations	The additional configurations allow for a scaling and resizing of the outgoing video signal. These settings are concerned with the original video format of the clips to be played out. The final output of the clips must be seen in relation to the selected video format in the video formats settings area. Additionally, there is a setting included that will configure the number of audio channels embedded in the video signal.
timeline options	With these settings you can, for example, alter the size of the video and audio tracks as they are present in the timeline of the CLIPSTER Edit Tool or you can configure the analog audio outputs of CLIPSTER. Because these settings items are exclusively concerned with the timeline of the CLIPSTER Edit Tool they are in detail explained in the “CLIPSTER Edit Tool” user guide.



The individual items of each settings area will be explained in section “The Video Format Settings in Detail” on page 82. The items not included in the video format window for an output, i.e. the items that are only available when configuring an input are explained separately in section “Special Items when Configuring the Input Format” on page 91.

3.1.3 Closing the Video Format Settings

To close the window to configure the video format settings and thereby to confirm or cancel changes to the settings perform the following:

- Use either one of the following possibilities:

button OK	This button confirms your alterations to the settings in the video format window and closes it. Then the new settings will be in effect for the in- or outputs.
button CANCEL	The button CANCEL closes the video format window without confirming your settings. The video system and the CLIPSTER software will use the latest confirmed settings.
button APPLY	This button confirms your alterations to the settings in the video format window without closing it. The new settings will be in effect for the in- or outputs.
[Alt + F4]	Same as button CANCEL .
	Same as button CANCEL .



CLIPSTER will store the video format settings project specific in the project files.

Additionally, via CLIPSTER you have the possibility at hand to define a default in- and output format that will be used for each initialized new project (see section "The Group 'Timeline'" on page 65).

After using one of the mentioned possibilities the window to configure the video format will be closed.



3.2 The Video Format Settings in Detail

This section describes the window to set the video format in detail. It is structured into the different areas as they were shown and described in section “Overview” on page 79, except for the timeline options whose descriptions you can find in the “CLIPSTER Edit Tool” user guide.

3.2.1 Timeline Name

The CLIPSTER software is prepared to support multiple video timelines. Then you can assign to each timeline a different name to distinguish between them easily.



Figure 3-3: Timeline name entry field

Additionally, to assign a timeline name is necessary when you want to control CLIPSTER via a network (see section “Using CLIPSTER in a Network” on page 121). For certain commands you have to enter a timeline name to execute them successfully. Enter the timeline name in the entry field of the area **Name** as a string.

Notation: Characters and numbers (string)

Example: `Timeline_1`

After that close and confirm the video format window to assign the timeline name (see section “Closing the Video Format Settings” on page 81).

3.2.2 The Video Formats

On the left side of the video format settings window you can find buttons and a list box to select one of the various video formats that the CLIPSTER video system provides.

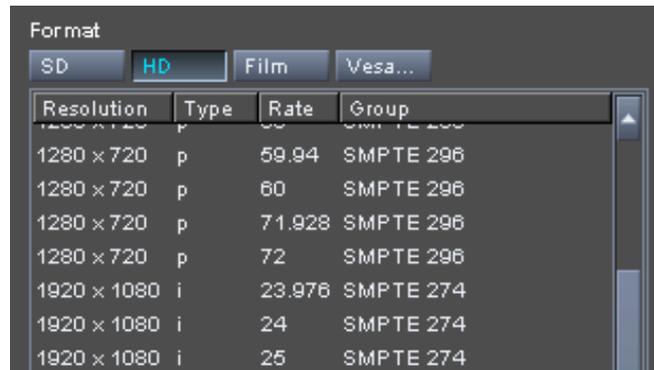


Figure 3-4: Selection of a video format

Select with the buttons **SD**, **HD**, **FILM**, and **VESA...** the video format type that you would like for your video material as an in- or output format respectively. The various formats of the chosen video format type that CLIPSTER can process will then be displayed in the list box below the buttons. After that select from the list box the desired video format. If appropriate, the video format details to the right will change automatically.



For an input of video signals the incoming signal has to match the video format settings, i.e. it must be of the same format and raster as the signal present at CLIPSTER's input. For this the window for an input of video signals provides the **AUTODETECTION** button which allows for an automatic detection of the video format by the CLIPSTER software (see section "Special Items when Configuring the Input Format" on page 91).

The items in the list box can be sorted. Simply click on the respective column heading to sort the entries in ascending or descending order.



3.2.3 The Video Format Details

To the right of the items to choose a video format you can find the video format details.

SDI Mode	YUV 4:2:2 (10 Bit)
Matrix	SMPTE 274
YUV range	Head
RGB range	Full
Sync in	Internal
H input delay	0
V input delay	0
Sync out	HVTTL HF VF
H output delay	0
V output delay	0
TC - Type	Timecode
TC - Start	00:00:00:00
TC - fps	23.976
TC - Drop frame	Off
ANC - Generator	rp188
Pulldown	Off
Startphase	A

Figure 3-5: Settings for the details of the video format

There you have to state the further in- or output parameters. In detail this area provides the following items:

- SDI Mode** This setting determines the I/O mode of the incoming or outgoing signal during an in- or output, i.e. the color space (YUV or RGB), the sampling frequencies (e.g. 4:4:4) and the color bit depth (e.g. 10 bit).
- Matrix** This setting indicates the color conversion matrix that will be used if a conversion between different color spaces and/or scalings between different value ranges are necessary. Usually, with a video format in SD the CCIR 601 and with a video format in HD SMPTE 274 is selected.



YUV range

If you have selected YUV as the SDI mode, this setting will be available and observed. It specifies whether the color space range of the data at the in- or output is in a restricted (Head) or in a full value range (Full).

The color space range of YUV is normally in a restricted value range (with 8 bit data for Y from 16 to 235, and for U as well as V from 16 to 240). A full range, for example, from 0 to 255 (8 bit data), is less common with YUV signals.

RGB range

If you have selected RGB as the SDI mode, this setting will be available and evaluated. It specifies whether the color space range of the data at the in- or output is in a restricted (Head) or in a full value range (Full).

In RGB 8 bit with a color space of the restricted value range you will have values ranging from 16 (total black) to 235 (full white), whereas with a full range color space you will have values ranging from 0 (total black) to 255 (full white). Together with RGB the latter color range is mainly used when working on the computer side with editing applications.



More general information about color spaces, color conversions and color value ranges can be found in section “Color Space Conversions and Scalings” on page 5. More detailed information about the color space and color value range settings as well as how they will affect the final result when processing video data can be found in section “Setting Color Space Conversions and Scalings” on page 10.

Sync in

Use this combo box to set the synchronization source for CLIPSTER. Usually, CLIPSTER runs in a non-genlock mode, i.e. an internal synchronization is performed (Internal). To set CLIPSTER into an analog genlock mode connect a signal to the sync inputs of CLIPSTER and select an appropriate sync source here (e.g. Bilevel or Trilevel). If a synchronization should be performed via the signal received on the SDI inputs, select the setting Digital.

**H input delay**

This setting adjusts the horizontal phase of the sync output signal relative to the input sync signal. The output signals (H and V sync as well as video) will be altered accordingly, i.e. the time base of the output signals will be generally altered. To change it either enter a new value or use the controls to the right of this field to step the value up or down.

Notation: For video formats sorted under the **SD** button in half-pixels, all other in full pixels

Example: 5

V input delay

This setting adjusts the vertical phase of the sync output signal relative to the input sync signal. The output signals (H and V sync as well as video) will be altered accordingly, i.e. the time base of the output signals will be generally altered. To change it either enter a new value (in lines) or use the controls to the right of this field to step the value up or down.

Notation: In lines

Example: 3

Sync out

With this combo box you can set the synchronization output of CLIPSTER. You can select between a bilevel, trilevel or TTL synchronization (with, for example, . . . HF VR as 'horizontal falling' and 'vertical rising') on the analog sync outputs of CLIPSTER. Usually, all sync signals will be given out on the horizontal sync output, however, the TTL sync will additionally be output on the vertical sync output. Furthermore, with the . . . (on green) settings you can enable a bilevel or trilevel sync signal on the green channel of the analog output.

H output delay

This setting adjusts the horizontal phase of the sync output signal relative to the video output signal. The effect will be that you move the given out image content horizontally. To change it either enter a new value or use the controls to the right of this field to step the value up or down.

Notation: For video formats sorted under the **SD** button in half-pixels, all other in full pixels

Example: 5

V output delay

This setting adjusts the vertical phase of the sync output signal relative to the video output signal (in lines). The effect will be that you move the given out image content vertically. To change it either enter a new value (in lines) or use the controls to the right of this field to step the value up or down.

Notation: In lines

Example: 3

TC - Type

With this setting you can switch between timecode and frame notation for the CLIPSTER software. For example, if `Frames` is selected, at all appropriate places the frame information is displayed instead of the timecode information.



This setting provides the same function as the **Display** setting in the **Timecode** group of the CLIPSTER Configuration Tool (see section “The Group ‘Timecode’” on page 60). When adjusting the **TC - Type** setting in the output video format window, the project related setting in the CLIPSTER will be adjusted as well and vice versa.

TC - Start

In the field **TC - Start** you can enter a timecode/frame offset for the incoming or outgoing video signal respectively. If your play-out timecode or source timecode (during record) needs an offset to match, for instance, with other projects, enter the offset in timecode notation here. Then, for example, the timeline of the CLIPSTER Edit Tool will provide this timecode offset.



This setting is valid for an output of video data as well as for a record, for example, when CLIPSTER is controlled in slave mode via RS-422.

Furthermore, this setting provides the same function as the **Timecode offset** setting in the **Timecode** group of the CLIPSTER Configuration Tool (see section “The Group ‘Timecode’” on page 60). When adjusting the **TC - Start** setting, the project related setting in the CLIPSTER will be adjusted as well and vice versa.

Notation: hh:mm:ss:ff

Example: 01:34:05:22

**TC - fps**

This setting is concerned with the timecode signal. Either select a predefined frame rate from the combo box list or enter the frame rate that the timecode should provide directly. With it you can record or play out the timecode signal in another frame rate as set via the originally selected video format. Use it, for example, when you want to record video data which will be sent in a 15 Hz raster but the project should provide, e.g. when played out later via CLIPSTER again, a higher frame rate. The timecodes of the available timelines in the CLIPSTER software will be adjusted to this setting accordingly. When an output of video material is performed, you can send out, for example, the timecode signal with a lower frame rate with this setting (e.g. 30 Hz), while the video signal is given out in a higher one (e.g. 60 Hz).

TC - Drop frame

NTSC material usually leads to a timecode offset after some playing time widely known as the 1000/1001 speed offset because the frame rate is, for example, with NTSC 525i not 30 Hz but 29.97 Hz. To account for this phenomenon some frames are 'dropped' from the timecode at certain intervals. This behavior of the timecode can be activated with this check box.

In the CLIPSTER software an activated drop-frame timecode feature will be indicated with a full stop as a separator between the seconds and the frames of the timecode format. Then the timecode fields of the software will display, for example, 12 : 25 . 07 instead of 12 : 25 : 07.



The given out image content is not affected by this setting, i.e. no image frames will be dropped. Only the timecode signal will be adjusted.

ANC - Generator

Specifies the data that will be sent in the blanking interval of the video data (in Recommended Practices of the SMPTE):

off	No data will be sent by CLIPSTER
rp188	DLTC and DVITC
rp196	DLTC and DVITC; will be transmitted in the horizontal ancillary data space (HANC)



rp201 DVITC and keycode
rp215 DVITC and keycode as well as various others when they were recorded by CLIPSTER

**Pulldown
Startphase**

If appropriate and available, select the necessary pulldown method from the **Pulldown** and **Startphase** combo boxes. Pulldown is needed when working with film-originated material.



For more details about pulldown please refer to section "Pulldown" on page 3).

3.2.4 The Additional Configurations

Directly below the items for the video format details you can find additional configuration settings to determine, for example, the autoscaling behavior of CLIPSTER. Additionally, there is a setting included that will configure the number of audio channels embedded in the video signal.

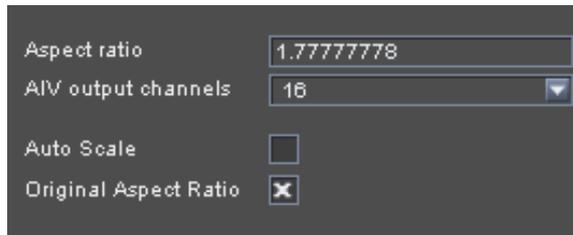


Figure 3-6: Settings for the additional configurations

Here, you can specify the way CLIPSTER performs scalings if the played out or recorded material does not match the selected video format, as well as adjust the number of embedded audio channels in the video output. In detail this area provides the following items:

Aspect ratio Via the entry field **Aspect ratio** you can change the aspect ratio of your image content. Thus you can compress or stretch the image available in the video overlay. This setting does not influence the video signal present at the in- or output directly, but is for convenience purposes only in order to display a clip with a distorted pixel ratio correctly in the overlay. The aspect ratio value should be entered as the value of the width (x) divided by the height (y).

Notation: Floating point of x/y



AIV output channels

Some external devices have difficulties when handling embedded audio that provides more than four audio channels. In the video output settings the amount of audio channels that will be embedded in the video signal (audio in video, AIV) can be set. Via the combo box select the number of audio channels that should be embedded in the video signal from the predefined values.



When performing record operations with externally connected equipment controlled via RS-422, you can more conveniently limit the AIV channels with a setting available in the device's profile (see section "CLIPSTER as Master" on page 72).

Auto Scale

This setting allows for a scaling and resizing of your original material. The original data on the hard disks of CLIPSTER must be seen in relation to the selected video format. Then, if the video material is greater than the selected video format, the images will get cropped (e.g. with video material in HD when an SD video format is selected), or, if it is smaller, you will get 'letterboxes', i.e. black borders around the images (e.g. if the video material is in SD and as a video format an HD raster is selected).

With the check box **Auto Scale** activated, the original material will be scaled up or down to its maximum allowable width and/or height according to the selected video format. With this setting you can make sure that no information gets lost, i.e. the images will not be cropped nor will they be too small for the selected video format with this function. If you leave the **Auto Scale** check box unchecked, the material will maintain its original size. Examples of the results of this setting can be found in figure 3-7 on page 3-91.

Original Aspect Ratio

Via the check box **Original Aspect Ratio** the aspect ratio (the relation of width (x) and height (y) of the video format) can be preserved. Thus, the images will not get stretched nor compressed. Examples of the results of this setting can be found in the figure below.

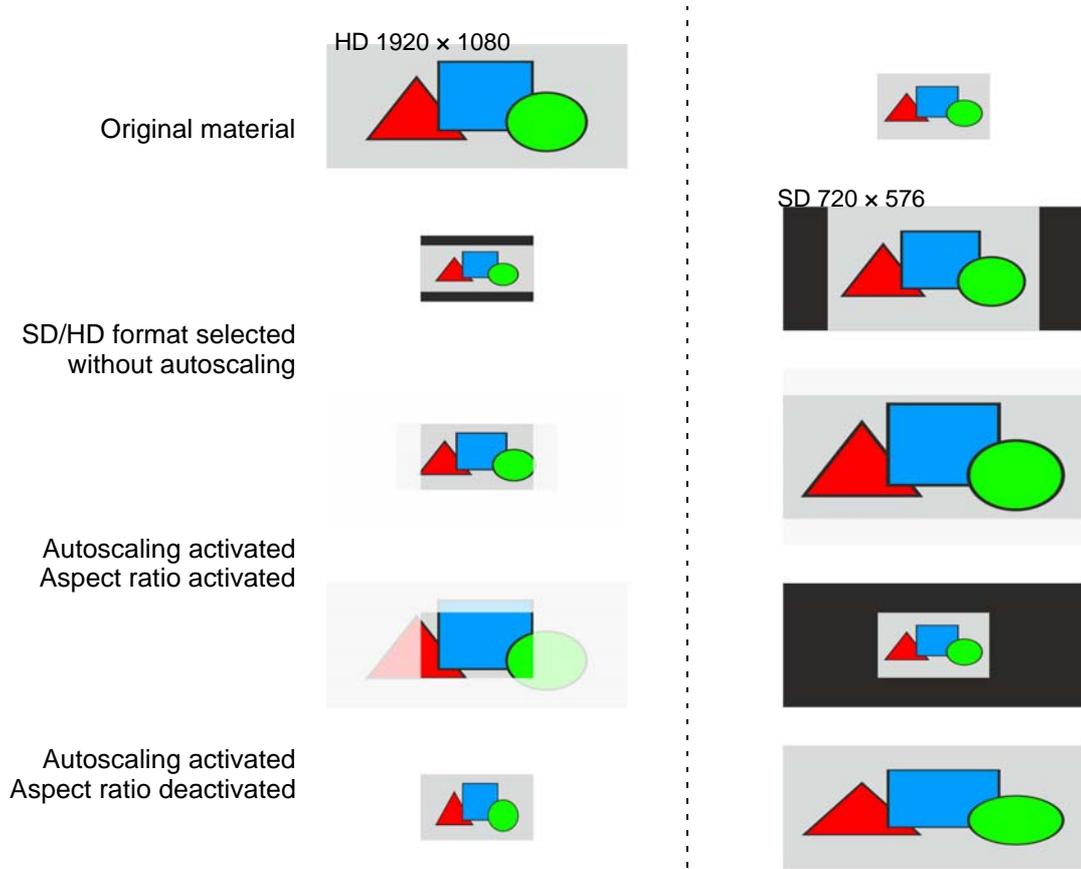


Figure 3-7: The results of autoscaling and original aspect ratio



If the video material is too small or too great for the selected raster, you can use the effects operator 'Zoom + Pan' of the CLIPSTER Edit Tool to receive acceptable play-out results via panning and/or zooming.

3.2.5 Special Items when Configuring the Input Format

The items not included in the video format window for an output, i.e. the items that are only available when configuring an input are ex-



plained in this section. The following items are only available when configuring the input video format:

Autodetection

The **AUTODETECTION** button directly above the buttons to select the video format type enables you to detect the video format automatically. For this a standard video signal has to be connected to CLIPSTER's input connectors. When this button is pressed, CLIPSTER tries to detect the video format and sets all items appropriately.



Some settings, such as the color value range, cannot be detected automatically by the CLIPSTER software. Instead they will be set to commonly used settings for the detected video format and/or color space. If applicable, you have to alter them manually.

TC - In

Some file formats for clips are capable of storing timecode information. These source timecodes can then be used in the timeline of CLIPSTER. However, during a record the CLIPSTER I/O Tool is capable of receiving several different timecode information. With the setting **TC - In** of the input video format window you can specify the type of timecode information that should be written to the correct location in the file header that is especially reserved for that kind of meta data, i.e. the timecode information that will be used as the standard source timecode provided by the file. This timecode can then be read by other applications that support source timecode as well.



Currently only the **.dpx* file format supports additional information such as source timecode.

- Internal No externally provided timecode is used. Each recorded clip starts its source timecode with 0 + <timecode offset>, i.e. with the **TC - Start** setting.
- LTC Uses and writes the longitudinal time and control code as the standard source timecode.
- VITC Uses and writes the vertical interval time and control code as the standard source timecode.

VITC2	Uses and writes the VITC of the odd field as the standard source timecode when processing interlaced material.
DLTC	Uses and writes the digital LTC as the standard source timecode. This data is usually transmitted via ANC.
DVITC	Uses and writes the digital VITC as the standard source timecode. This data is usually transmitted via ANC.
DVITC2	Uses and writes the digital VITC of the odd field as the standard source timecode when processing interlaced material. This data is usually transmitted via ANC.
VTRTC	Uses and writes the timecode provided by the connected external player, such as a VTR, as the standard source timecode. This data is usually transmitted via RS-422.



Some digital cameras send their video data with higher frame rates, for example, 50 or 60 Hz. But to have the recorded video material immediately in a proper frame rate for such a device as CLIPSTER you can set up at the camera the frames that the device connected to the camera has to capture. Then during a capturing with such a camera and, for example, the CLIPSTER I/O Tool these frames will be tagged by the camera and when the **Vari-frame** check box is enabled, only those will be recorded by CLIPSTER. This way you can reduce the 50 or more images send by the camera per second to a standard and easy to handle 24 frames per second.



Bin Clip Properties

The bin of the CLIPSTER software provides the very first access to the video and audio material on the hard disk array. It can be used for a clip and project management and normally contains all video and/or audio clips that you intend to use in your project.



Further information about the usage and features of the bin can be found in the “CLIPSTER Edit Tool” user guide.

When adding clips to the bin via a record, the CLIPSTER software automatically sets all properties correctly.

Each video and audio clip present in the bin (bin clip) provides clip properties that can be altered according to the characteristics of the material available on the video hard disk array. When clips are added to the bin at a later time, for example, via a drag-and-drop procedure or via the menu option **Add Clip**, some characteristics of video material cannot be discerned by the software automatically. For instance, when adding a *.yuv clip, its color space is automatically set to YUV, the field mode to Interlaced, the color space range to Head, etc., because this will most likely be the case when using a true YUV file. If the properties of the clip do not match the material on the hard disks, you have to call them up and change them manually via the properties of the clip present in the bin. The altered clip properties will then be used for this clip in the entire CLIPSTER software, for some settings even if it was already added to the timeline.

4.1 Basics

This section describes some basics regarding the clip properties of a video or audio clip in the bin. After a description of how to access the properties an overview of its window is provided. This is followed by a description of how to close and, if applicable, confirm the properties of a bin clip.

4.1.1 Accessing the Clip Properties

You can call up the properties of a video or audio clip in the bin via its context menu:



For this an audio or video clip has to be present in the contents area of the bin. To receive a clip in the bin you have to either record it via the CLIPSTER I/O Tool or add it manually to the contents area. Further information about this or the bin in general can be found in the “CLIPSTER Edit Tool” user guide.

- In the contents area of the bin invoke the context menu on the clip whose properties you would like to change.
- On the context menu select the menu option **Properties**.



Contrary to video the properties of audio multi-clips cannot be changed. Usually, when an audio multi-clip is added to the contents area of the bin, a subfolder will be created automatically which will then contain the individual audio clips as they are present on the hard disk array. If you want to change the properties of an audio multi-clip, you have to alter the properties of each clip in the provided subfolder individually. Further information about multi-clips can be found in the “CLIPSTER Edit Tool” user guide.

After this the clip properties window opens (see section “Overview” on page 97) and you can now change its properties accordingly.

4.1.2 Overview

After accessing the properties of a clip in the bin via its context menu (see section “Accessing the Clip Properties” on page 96), you will see either the following or a similar window on the screen:

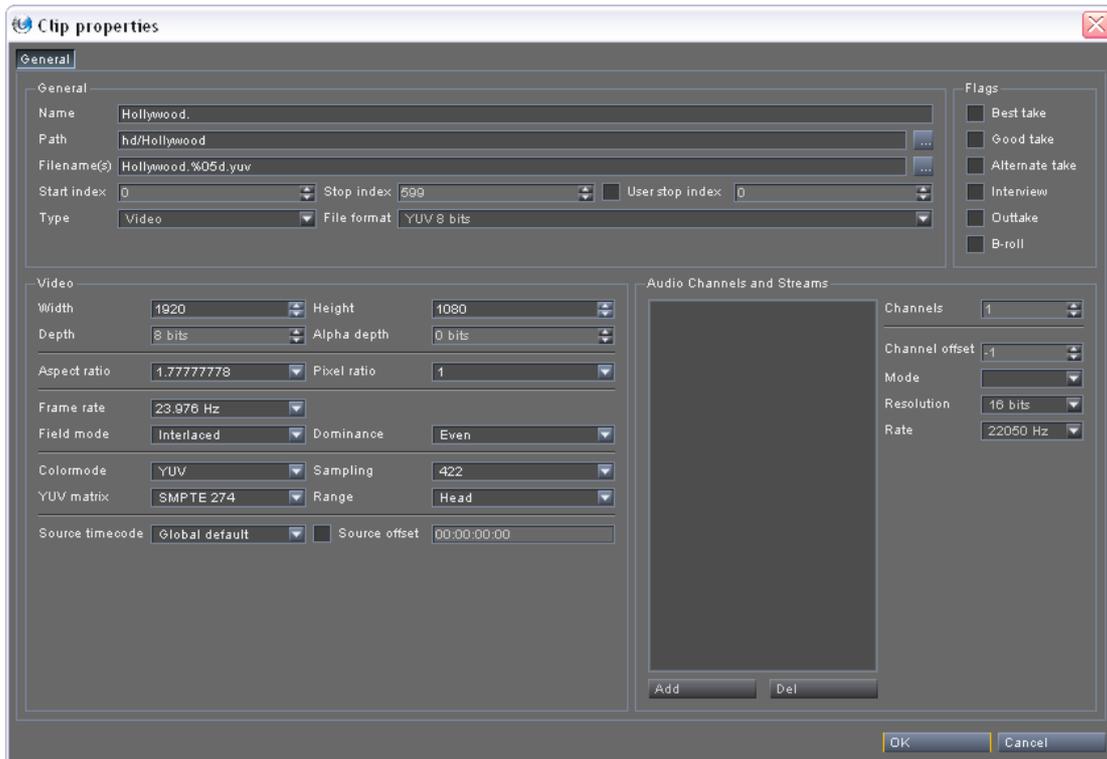


Figure 4-1: Window of bin clip properties

In this window you can alter the properties of the video or audio clip. If the clip was already added to the timeline (perhaps even more than once), the clip’s behavior can be changed via the bin clip properties instantly, i.e. the changes will be applied to the clip in the bin and its representations in the timeline as well. In detail this window contains the following items:



Some of the clip properties can only be altered if the clip is not already present in the timeline.

Because the CLIPSTER software uses representations of the original material on the hard disk array only, regardless of the settings performed here, your original material will not be affected.

general clip properties

In the settings area **General** you can change the more general parameters of the clip, such as its name, file name or directory path.



flags	With the Flags area you can assign specific flags to a clip that may help you during your clip and project management.
video settings	If the clip is a video clip, you can change the video related settings of the clip's representation in CLIPSTER in the area Video , such as its aspect ratio or field mode.
audio settings	If the bin clip is an audio clip, you can change its audio related settings in the area Audio Channels and Streams .



The individual items of each settings area will be explained in section "The Bin Clip Properties in Detail" on page 99.

4.1.3 Closing the Clip Properties

To close the window of the clip properties and thereby to confirm or cancel changes to the settings perform the following:

- Use either one of the following possibilities:

button OK	This button confirms your alterations to the settings in the clip properties window and closes it. Then the new settings will be in effect for the respective clip.
button CANCEL	The button CANCEL closes the clip properties window without confirming your settings. The CLIPSTER software will use the latest confirmed settings.
[Alt + F4]	Same as button CANCEL .
	Same as button CANCEL .



CLIPSTER will store the properties set via the clip properties window project specific in the project files.

After using one of the mentioned possibilities the window to configure the clip properties will be closed.

4.2 The Bin Clip Properties in Detail

This section describes the window to set the properties of a clip in the bin in detail. It is structured into the different areas as they were shown and described in section “Overview” on page 97. Once the settings are complete, you can confirm them as described in section “Closing the Clip Properties” on page 98. They will then be in effect for this clip and its representations in the entire CLIPSTER software.

4.2.1 The General Clip Properties

The area **General** provides more general characteristics and parameters of the clip, such as its name, file name or directory path.

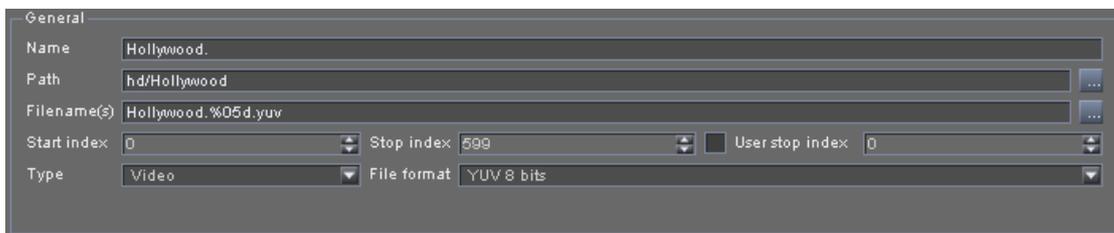


Figure 4-2: General properties of a clip

In detail this area provides the following settings:

Name This entry field states the name of the clip as it will occur, for example, in the clip’s representation in the timeline. Usually, it is the file name of the video files without the frame counter and the file extension. You can change it to any name you want.
 Notation: Characters and numbers (string)
 Example: Hollywood_01



Due to some limitations of the internal notation, the following characters in a clip name will be replaced automatically:
 , by ., " by ', < by (, and > by).



Path

This setting indicates the directory path to the video or audio material on the video hard disk array. It can be entered either relative, i.e. as a path that will be located within the **System base video directory** (see section "The Group 'General'" on page 37), or absolute.

Either type in the path in the respective entry field or click on the button to the right () to select a path directly via the opening dialog window.

Notation and Example: See section "Notes on Directory Paths" on page 2.



Changing this setting may lead to an invalid clip.

Filename(s)

This setting indicates the file name(s) of the video or audio material. Either type in the file name in the entry field or click on the button to the right () to select a file directly via the opening dialog window.

While audio files are shown with their exact file name, video file names are entered in C notation, usually with the following syntax:

`<string>%0Yd.<ext>`

<code><string></code>	Preceding string of file name
<code>%</code>	Marker that the following is a format string
<code>0</code>	If the output of the format string does not provide the stated length, fill it with zeros (0)
<code>Y</code>	Number of digits, for example, 5
<code>d</code>	Marker that the format string is a decimal number
<code><ext></code>	File extension

Example: `Hollywood%05d.dpx`

With this setting the file names on the hard disk array should be:

`Hollywood00001.dpx`

`Hollywood00002.dpx`

`Hollywood00003.dpx`

etc.



Changing this setting may lead to an invalid clip.

Start index	<p>Shows the start index of the clip, i.e. the first frame number that is available (indicated by the file name; with audio files usually zero (0)).</p> <p> This setting will be determined by CLIPSTER automatically and cannot be altered.</p>
Stop index	<p>Shows the stop index of the clip, i.e. either the last frame number that is available (indicated by the file name) or the last audio sample (determined by the length of the audio clip).</p> <p> This setting will be determined by CLIPSTER automatically and cannot be altered.</p>
User stop index	<p>With this check box and the entry field to the right you can define a stop index by your own (usually greater than Stop index). The clip will then provide the stated length (User stop index minus Start index) once it has been added to the timeline and trimmed accordingly. Then you can work with the clip as usual regardless of the missing data. At any time later the data on the hard disk can be completed and afterwards the clip in the project will provide this data without any further adjustments or editing. To activate a user defined stop index simply enable the check box which will make the entry field to the right available to you. Then enter the required stop index.</p> <p> When not trimmed beforehand in the source-edit mode of the CLIPSTER Edit Tool, the clip will be added to the timeline with its original (smaller) length. To receive the new length of the clip in the timeline the outpoint of the clip has to be trimmed accordingly.</p>
Type	<p>This setting shows whether the clip is recognized as video or audio.</p> <p> This setting will be determined by CLIPSTER automatically and cannot be altered.</p>
File format	<p>Shows the file format of the clip.</p> <p> This setting will be determined by CLIPSTER automatically and cannot be altered.</p>



4.2.2 The Flags

With the items of the **Flags** area you can assign specific flags to a clip that may help you during your clip and project management.



Flags can only be applied to video clips.

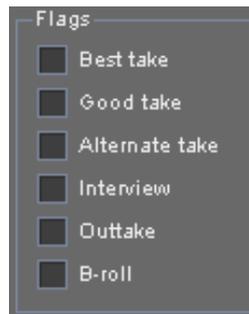


Figure 4-3: Flags for a clip

Simply activate the appropriate check box(es) and confirm your settings with the **OK** button to assign the flag(s) to the respective clip.

In the bin you can then, for instance, sort the clips by flags to identify the tagged ones easily and perform further administrative work with them.

4.2.3 The Video Settings

If the properties you are working on belong to a video clip, the items in the area **Video** will be available. With them you can change the video related settings of the clip's representation in CLIPSTER, such as its aspect ratio or field mode.

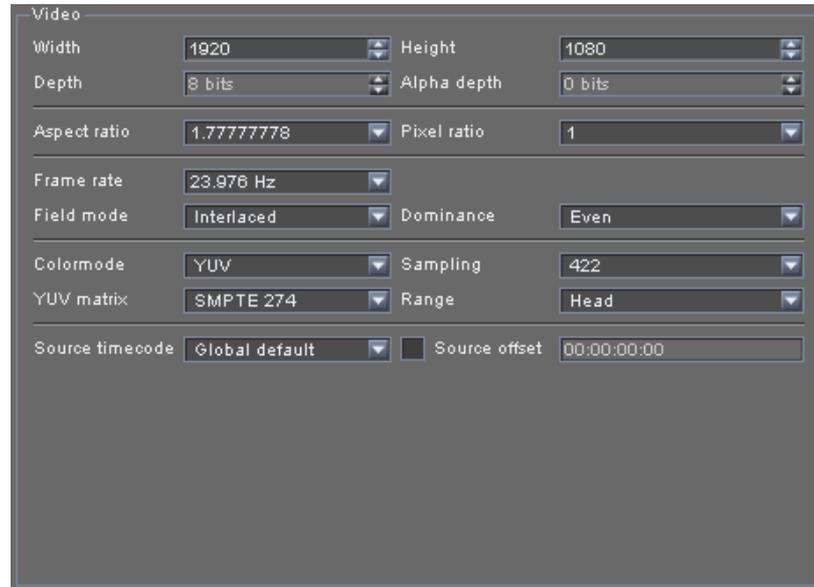


Figure 4-4: Video related settings for a clip

In detail this area provides the following settings:

- Width** This entry field states the width of the video images (x-axis) in pixels. To see the effect of a change of this setting in the video overlay or at the video output the autoscaling feature (either with or without original aspect ratio) has to be activated via the video format settings (see section “The Additional Configurations” on page 89).
 Notation: In pixels
 Example: 2048
- Height** This entry field states the height of the video images (y-axis) in pixels. To see the effect of a change of this setting in the video overlay or at the video output the autoscaling feature (either with or without original aspect ratio) has to be activated via the video format settings (see section “The Additional Configurations” on page 89).
 Notation: In pixels
 Example: 1556
- Depth** This setting shows the color bit depth of the video clip. CLIPSTER supports clips with a bit depth of up to 16 bit.



This setting will be determined by CLIPSTER automatically and cannot be altered.

Alpha depth

If your clip provides an alpha (key) channel, its bit depth will be displayed here (no alpha channel equals 0 bit).



This setting will be determined by CLIPSTER automatically and cannot be altered.

Aspect ratio

Pixel ratio

The settings **Aspect ratio** and **Pixel ratio** change the representation mode of the image content available on the hard disk array. They are related to each other. Use either one of these settings to change the ratio of the clip, for example, to restore anamorphic captured material. To see the effect of these settings in the video overlay or at the video output the autoscaling feature (either with or without original aspect ratio) has to be activated via the video format settings (see section “The Additional Configurations” on page 89). To alter these settings type in in the entry fields a value manually or select one of the preset values via the combo boxes. The ratio values should be entered as the value of the width (x) divided by the height (y).

Notation: Floating point of x/y

Example: 0.749999998

Frame rate

Changes the frame rate of the video clip, for example, if its original frame rate differs from the set one. Either type in in the entry field a value manually or select one of the preset values via the combo box.

Field mode

With this setting you can alter the field mode of the video clip added to the bin. You can either choose a progressive or interlaced field mode. If the set value does not match the material on the hard disk array, you have to change it accordingly.

Dominance

Select the dominance for your interlaced material from the combo box **Dominance**. The **odd** value starts the clip with the second video field of the interlaced image while the value **Even** begins with the first video field.



- Color mode** With this setting you can alter the color mode (color space, either RGB or YUV) of the clip if the set value does not match the material on the hard disk array.
- Sampling** This setting indicates the sampling frequency (e.g. 4:4:4) of the clip. It should match the material on the hard disk array.
- YUV matrix** In combination with the set color space (color mode) of the clip this setting describes the color space and the color matrix of your clip. It should state either one of the following possibilities:
- | | |
|-----------|--|
| CCIR 601 | Color space and matrix usually applied to SD data. |
| SMPTE 274 | Color space and matrix usually applied to HD data. |
- Range** This setting specifies whether the color space of the data on the hard disk array is in a restricted (Head) or in a full value range (Full).
- The color space of YUV is normally in a restricted value range (with 8 bit data for Y ranging from 16 to 235, and for U as well as V from 16 to 240). A full range, for example, from 0 to 255 (8 bit data), is less common with YUV signals.
- In RGB 8 bit with a color space of the restricted value range you will have values ranging from 16 (total black) to 235 (full white), whereas with a full range color space you will have values ranging from 0 (total black) to 255 (full white). Together with RGB the latter color range is mainly used when working with the data on the computer side with editing applications.



More general information about color spaces, color conversions and color value ranges can be found in section “Color Space Conversions and Scalings” on page 5. More detailed information about the color space and color value range settings as well as how they will affect the final result when processing video data can be found in section “Setting Color Space Conversions and Scalings” on page 10.



Source timecode Some file formats for clips are capable of storing timecode information. These source timecodes can then be used in the timeline of CLIPSTER. However, when recording clips via the CLIPSTER I/O Tool, the software will write far more timecode information into the file header than usually supported by other applications. When processing these clips with the CLIPSTER software again, you can select between the different timecodes provided by a clip.

This setting determines the source timecode information the respective clip will use when added to the timeline.



Currently only the `*.dpx` file format is checked for and provided with source timecode information.

Global default This is the recommended setting for the clip's source timecode. Then all clips with this setting will use the source timecode information that is set via the Configuration Tool (see **Default source TC** in section "The Group 'Timecode'" on page 60).



For a description of the other possible settings please refer to the description of the setting **Default source TC** in section "The Group 'Timecode'" on page 60.

Source offset If a clip needs an offset for the source timecode to match, for instance, with other clips already added to the timeline, you have the possibility at hand to define an offset for each clip individually with this setting. The source timecode of the clip in the timeline of the CLIPSTER Edit Tool will then provide this timecode offset.

For this activate the check box to the right of the setting **Source timecode** to enable the **Source offset** configuration. Then you can enter in the entry field to the right the timecode offset in standard timecode notation that the clip should provide when added to the timeline.



This offset is available only when as a display type **Source TC** is selected (see section “The Group ‘Timecode’” on page 60.)

Notation: **hh:mm:ss:ff**
 Example: **01:34:05:22**

4.2.4 The Audio Settings

If the properties you are working on belong to an audio clip, the items in the area **Audio Channels and Streams** will be available. With them you can change the audio related settings of the clip.



Changes to the audio settings can only be performed if the clip is not already present in the timeline.

Additionally, the properties of audio multi-clips cannot be changed. Usually, when an audio multi-clip is added to the contents area of the bin, a subfolder will be created automatically which will then contain the individual audio clips as they are present on the hard disk array. If you want to change the properties of an audio multi-clip, you have to alter the properties of each clip in the provided subfolder individually. Further information about the multi-clips can be found in the “CLIPSTER Edit Tool” user guide.



Figure 4-5: Audio related settings for a clip



CLIPSTER supports audio clips that contain more than one mono or stereo channel (multiple channels) in the audio file. Such a clip may contain up to 16 streams of audio. With the clip properties of an audio clip in the bin you are able to control these streams as well as set other parameters of the clip: By clicking on the channels in the list box you can view and alter their properties with the controls to the right.

In detail the area **Audio Channels and Streams** provides the following settings:



When performing a record via the CLIPSTER software, you can influence the stream settings described in the following via the **+** button of the audio channel settings.

list box of audio streams

This box lists the streams (channels) together with their audio mode (stereo/mono) that the clip provides. It may contain up to 16 streams for each channel that the CLIPSTER software can handle. If a stream is in stereo, it will show two channels for the stream. If it is in mono, only one channel will be displayed for the stream.

With the buttons below the list box and the controls to the right you can delete existing streams, add them anew or change the configuration of each stream individually.

stereo: Stream x: <chan.> y - <chan.> z

mono: Stream x: <chan.> y - <chan.> y

Example: Stream 5: 8-9

ADD

When channels were deleted (with the button **DEL**), you can add them again later with this button. You can change the properties of added channels via the controls to the right of the list box.

DEL

With the button **DEL** you can delete audio streams from the list box and thus bar them from usage in the CLIPSTER software. Simply select the respective stream and click on the button **DEL** to remove it. Deleted streams can be added again later via the button **ADD**.

To delete streams from audio clips may be useful when the clip provides streams that are not needed, for example, streams with no contents at all. Then they can be deleted and will not be used when this clip is added to the timeline.

Channels

This setting shows the number of channels that the audio clip provides. Up to 16 channels are possible per audio clip.



This setting will be determined by CLIPSTER automatically and cannot be altered.

Channel offset

When adding previously deleted streams or configuring already available streams, you can determine the channels that the stream should provide with the setting **Channel offset**. Select from the list box the respective stream that should be configured to other channels, or use this setting after a new stream was added to the list box. For this you may either enter the starting channel manually in the entry field of the setting **Channel offset** or use the controls to the right of this field to step the value up or down.

Mode

The audio mode of the selected stream in the list box can be configured with this setting. Select from the list box the respective stream that should provide another audio mode and select the desired mode from the combo box **Mode**.



By changing a stereo stream into a mono stream you divide one stream into two separate ones: The remnant channel of the stereo stream can be added as another mono stream via the **ADD** button.

Resolution

With the combo box **Resolution** you can set the resolution of the selected audio stream (bit depth). Select from the list box the respective stream that should provide another resolution and choose the desired bit depth from the combo box.

Rate

You can set the sampling rate of the selected audio stream via this combo box. Select from the list box the respective stream that should provide another sampling rate and choose the desired one via the combo box.

Bin Clip Properties

▶ The Bin Clip Properties in Detail





Other Applications and Systems

Because the CLIPSTER software was designed for the high-end market when working with video, CLIPSTER can be seamlessly integrated into existing workflows if the use of other applications and/or systems is required. However, to work with particular third-party applications and/or systems properly CLIPSTER has sometimes to be configured in a certain way. These configurations will be detailed in this section. Furthermore, it will be explained how to use CLIPSTER in a multi-device operation mode and via a network from another workstation.



5.1 The Multi-device Operation Mode

A CLIPSTER system can be extended by a multi-device operation mode which allows for a simultaneous control of several CLIPSTER devices by R&S DVS via one RS-422 control panel, such as an edit controller.



The multi-device operation mode is an optionally available feature of CLIPSTER. Depending on the ordered options for your CLIPSTER video system, it may not provide the multi-device capability.

The multi-device operation can only be used in the CLIPSTER Edit Tool software module

The multi-device operation mode uses the master/slave principle: One CLIPSTER or is the master that is controlled via a control panel, all other systems are slaves that follow the commands of the master device.

Master and slave devices are connected via additional RS-422 connections which are used by the master device to transmit control parameters (current position or play) to the slave devices. The connections do not use the standard RS-422 master and slave ports, but the additional ports labelled 'AUX 1' to interconnect the systems. With this the standard RS-422 ports can be connected to control panels and VTRs as usual, and they can be used when not in the multi-device operation mode.

The following details all there is to know about how to setup and operate the CLIPSTER systems in a multi-device operation mode. First, the hardware installation and setup will be described, followed by some details about how to synchronize the setup. Afterwards some notes about the multi-device operation mode are detailed providing you with information how to operate in this mode. The chapter will be concluded with a specification about the crossover cable that is needed to interconnect the master with the slave(s).

5.1.1 Hardware Installation and Setup

This section describes the hardware installation and setup to operate two or more CLIPSTER or video systems in a multi-device operation mode. You can connect as many video systems together as you want. This section describes first how to connect two video systems. However, in case you want to connect more than two video systems, you have to use an RS-422 distributor which will also be addressed in this section.

Connecting Two Video Systems

To connect two R&S DVS video systems for a multi-device operation mode, you can use a standard 9-pin RS-422 cable and the adapter which is included in the delivery.

- Connect the RS-422 adapter to the 9-pin cable.



The 9-pin cable together with the adapter form a crossover cable. The crossover of the pins is realized by the RS-422 adapter. If you want to use a cable without the crossover adapter, it must follow the specifications described in section “Cable Specifications for a Multi-device Operation” on page 118.

- Connect the 'AUX 1' ports of both systems with this cable directly. You do not have to observe a certain cable direction.

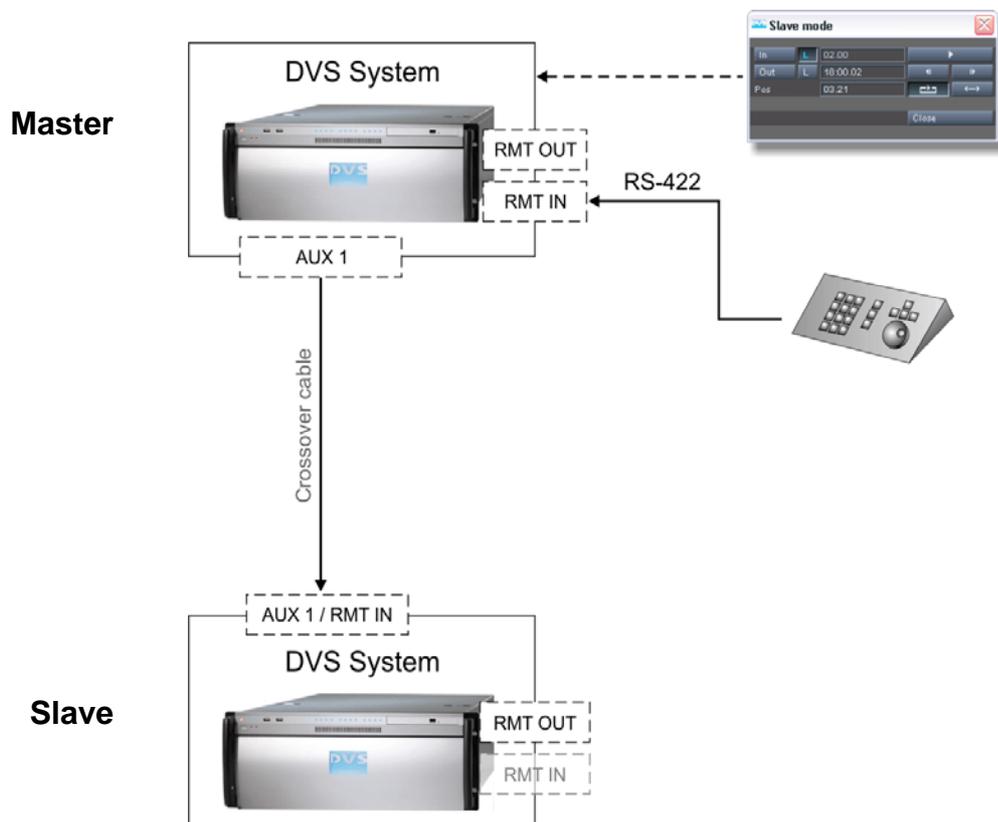


Figure 5-1: Two video systems in multi-device operation



Once the cable is installed, the systems are ready for a multi-device operation. However, you also have to adjust the software settings of each controlling software according to its role in the multi-device operation.



Further information about the multi-device operation mode can be found in section “Notes on the Multi-device Operation Mode” on page 117.

If your application of the multi-device operation mode requires a synchronization of the connected devices, please refer to section “Synchronizing the Devices” on page 115.

Connecting More than Two Video Systems

To connect more than two R&S DVS video systems for a multi-device operation an RS-422 distributor has to be used. For this you have to use standard 9-pin RS-422 cables and the adapter which is included in the delivery.

- Connect the RS-422 adapter to one of the 9-pin cables.



The 9-pin cable together with the adapter form a crossover cable. The crossover of the pins is realized by the RS-422 adapter. If you want to use a cable without the crossover adapter, it must follow the specifications described in section “Cable Specifications for a Multi-device Operation” on page 118.

- Use this cable to connect the ‘AUX 1’ port of the master to the input of the RS-422 distributor. You do not have to observe a certain cable direction.
- Connect the ‘AUX 1’ ports of the slaves to the outputs of the RS-422 distributor with the rest of the 9-pin cables.

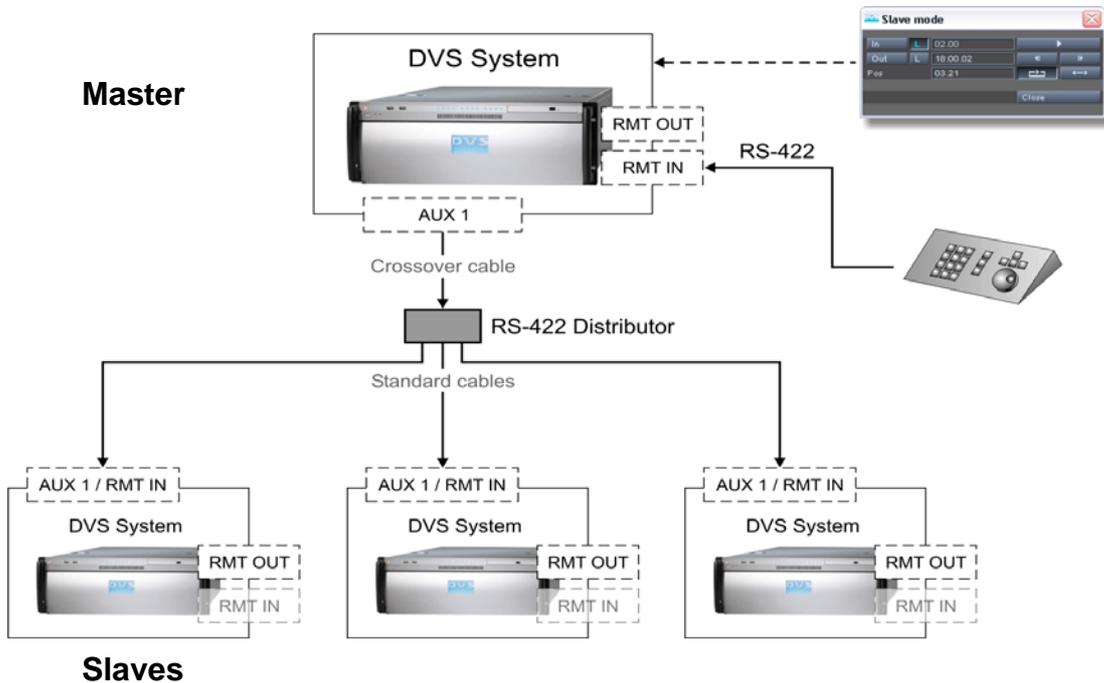


Figure 5-2: More than two video systems in multi-device operation

Once the cables are installed, the systems are ready for a multi-device operation. However, you also have to adjust the software settings of each controlling software according to its role in the multi-device operation.



Further information about the multi-device operation mode can be found in section “Notes on the Multi-device Operation Mode” on page 117.

If your application of the multi-device operation mode requires a synchronization of the connected devices, please refer to section “Synchronizing the Devices” on page 115.

5.1.2 Synchronizing the Devices

In most multi-device applications it will be necessary to synchronize the connected devices for a proper operation. There are two possibilities to synchronize the multi-device operation:

1. Either use an external sync generator, or
2. synchronize the multi-device operation from within by selecting one of the connected devices as a sync master.



Using an External Sync Generator

The external sync generator synchronizes all connected devices. To integrate it in the multi-device setup perform the following:

- Connect all R&S DVS devices with their sync inputs to the external sync generator.
- If appropriate, alter the sync settings of all connected devices via their video format settings. Further details about this can be found in section “The Video Format Details” on page 84.

The setup for the synchronization with the external sync generator is now complete. Once the external sync generator is active, the synchronization will take place.

Synchronizing the Multi-device Operation from Within

Instead of using an external sync generator, you can synchronize the devices in the multi-device operation from within by selecting one of the connected R&S DVS devices as a sync master. For this perform the following:

- Select one device that shall act as the sync master.



The sync master does not need to be identical with the master of the multi-device operation. You can choose any of the R&S DVS devices as the sync master.

An analog sync signal can be transmitted through the sync in- and outputs, a digital sync signal through the serial digital interface (SDI) ports. You can use either a distributor to connect the slave’s sync inputs to the master’s sync output, or build a chain where the master’s sync output is connected to the sync input of the first slave, whose sync output is connected to the sync input of the second slave, and so on.



When using a digital sync signal, it is recommended to use the C channel of the SDI ports as the sync output (contents of channel A plus additional information such as time- and/or keycode overlays) and connect it to the SDI input of channel A of the sync’s slave. With this you will still be able to use the output ports of channel A and B of each system as usual. This can be used in a sync chain as well as in a sync distributor setup.



When building a sync chain with a great number of R&S DVS devices, cable elapse times may lead to synchronization problems. In such a case you have to use an external sync generator for a proper synchronization.

- Connect the other R&S DVS devices which act as sync slaves to the sync master via their sync connectors.

- If appropriate, alter the sync settings of all connected devices via their video format settings. Further details about this can be found in section “The Video Format Details” on page 84.

The setup for the synchronization from within is now complete and the synchronization will take place.

5.1.3 Notes on the Multi-device Operation Mode

This section provides some notes on how to use the multi-device operation mode.

Once the video devices are properly set up according to the instructions in section “Hardware Installation and Setup” on page 112, you can run them in the multi-device operation mode.



The multi-device operation mode is an optionally available feature of CLIPSTER. Depending on the ordered options for your CLIPSTER video system, it may not provide the multi-device capability.

The multi-device operation can only be used in the CLIPSTER or Edit Tool software module.

Operating in the Multi-device Operation Mode

The multi-device operation mode allows for a simultaneous control of several R&S DVS video systems by one RS-422 control panel. It uses the master/slave principle: One video device is the master and all other connected devices are slaves that follow the commands of the master device.

All video devices in the multi-device operation keep their whole range of features. The R&S DVS video systems can be set up and controlled individually when not in the multi-device operation mode via their controlling software as usual. Each participant in the multi-device operation has to be configured to its respective role in the multi-device operation. This can be performed with a setting available in the group **VTR** of the CLIPSTER or CLIPSTER (see section “The Group ‘VTR’” on page 69).

Furthermore, the video format at each device should be set correctly and their synchronization in- and outputs have to be configured accordingly.

Once each participant in the multi-device operation is configured correctly, you have to enable the multi-device operation mode on all connected devices (master as well as slave(s)). For this at all devices the slave mode has to be activated, i.e. the **SLAVE MODE** button in the user interface of the controlling software has to be activated.



During the multi-device operation the master has to be controlled by an RS-422 control panel, such as an edit controller, and the slaves will frame accurately follow its commands.

What is Possible with the Multi-device Operation Mode

The slave devices frame accurately follow any play operation of the master device, including slow/fast motion, jog, shuttle, loop, and reverse mode.

When playing out the timeline on the master device, all systems display the same frame positions.



The timeline contents of these positions may be different according to the material available on the hard disk array and the clips present at this position in the timeline.

What is not Possible with the Multi-device Operation Mode

Static settings cannot be received from the master device automatically and have to be set at each device individually. Static settings are for example:

- video raster
- sync source
- sync output
- audio channels
- quantization (8 or 10 bit)

Furthermore, a simultaneous control of a connected device via RS-422 from one of the R&S DVS video systems will no longer be possible due to an activated slave mode.

5.1.4 Cable Specifications for a Multi-device Operation

Some connections for the multi-device operation mode need a crossover cable to receive the commands correctly. For the connection you have to use a standard 9-pin RS-422 cable and the delivered adapter. The 9-pin cable together with the adapter form the crossover cable. The crossover of the pins is realized by the RS-422 adapter. In case you want to use a different cable without the crossover adapter, you have to connect each pin 2 of the plugs with the respective pins 8 of the other plug, and each pin 3 with the respective pins 7:

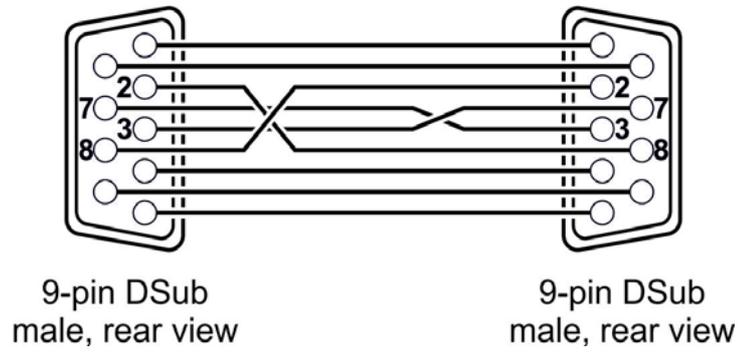


Figure 5-3: Crossover connections



A pin-out of the 'AUX 1' connector can be found in the "CLIPSTER" hardware guide.



5.2 Mixer Function for Color Graders

R&S DVS video systems allow you to facilitate your work when using certain third-party color graders, such as a Pogle color grading system by Pandora. With the optionally available mixer feature of CLIPSTER you can ascertain whether a grading has been performed accurately by switching the output signal showing the material present on the hard disk array of CLIPSTER between the incoming video signal.



The mixer function of CLIPSTER is an optionally available feature. Depending on the ordered options for your CLIPSTER video system, it may not provide the mixer functionality for color graders.

The following lists shortly what to observe to use the mixer function of the R&S DVS video system:

- The connection between the color grader and the R&S DVS video system must be set up via RS-422, i.e. connect the remote control output of the grader to the auxiliary remote control port of the R&S DVS hardware ('AUX 1').
- The commands send via RS-422 should comply with the GVG (Grass Valley Group) mixer protocol.
- The mixer function of CLIPSTER works in the VTR task mode of the CLIPSTER or Pronto2K/ProntoHD I/O Tool only (see respective user guide).
- It can be used at all times in the VTR task mode, i.e. with the slave mode of the VTR task mode activated or deactivated.
- To use the mixer function its control setting has to be enabled in the CLIPSTER (tab **Defaults**, group **VTR**, see section "The Group 'VTR'" on page 69). With this setting you can also deactivate the mixer once your task is finished.

Afterwards, when everything is set up properly and the VTR task mode is activated with the necessary VTR timeline project loaded, you can use the mixer function: As soon as the correct commands are received by CLIPSTER, wipes will be performed between the material available in the VTR timeline and the incoming video signal. The transitions between the two data streams can be observed at all video output connectors of CLIPSTER.



To view the transition with an externally connected monitor, you have to configure the video output format of the VTR task mode accordingly.

5.3 Using CLIPSTER in a Network

You can use the CLIPSTER application in a network and connect to it, for example, from other workstations via a terminal. This section describes what to do to connect to CLIPSTER from another workstation, the commands that can be performed, and how to close the network connection.

5.3.1 Connecting to CLIPSTER

You can connect to the CLIPSTER software from another workstation via a terminal. This section describes how to achieve a connection by using a Telnet program as a sample terminal:



For the following the CLIPSTER application has to be configured appropriately, i.e. it must be set to allow external connects. Further information about this and the other network configurations can be found in section “The Group ‘TCP/IP’” on page 58.

Furthermore, the workstation and the CLIPSTER video system have to be properly connected to a network and the CLIPSTER software has to be running.

- On the workstation that should be connected to CLIPSTER activate a command line (shell, or in case of Windows MS DOS prompt).
- Type in `telnet <name or IP address of CLIPSTER> <port of CLIPSTER software>`, for example, `telnet localhost 42219`.
- After that press [Enter].

Then you will be connected to the CLIPSTER application on the CLIPSTER video system and you can control it easily with the commands listed in section “List of Commands” on page 121.

5.3.2 List of Commands

Once you are connected properly to the CLIPSTER application you can control it and thus the video system with the help of commands.

- Type in a command and confirm it with the key [Enter].



Then the command will be executed. The following table provides a list of the available commands:



Several commands of the table below perform the same operation as menu options on the menus of CLIPSTER's menu bar. For further information about them please refer to the "CLIPSTER Edit Tool" user guide.

Command	Explanation
ActivateAllProxies	Activates all proxies in the bin
AddEdit	Adds a new cutting (edit) point at the current position of the timeline cursor
AddMarker	Adds a timeline marker at the current position of the timeline cursor
BinCheck	Checks the consistency of the bin
BinClear	Removes all clips from the bin
BinExport	Opens the dialog window to export the bin to a file
BinImport	Opens the dialog window to import bin data from a file
CineReelUpdate	Checks for a connected R&S DVS Cine-Reel and loads the clips into the bin
CleanTmpDir	Cleans up the directory of the temporary data (prerendering)
ClearInOutpoint	Deletes the in- and outpoint of the timeline
ClearInpoint	Deletes the inpoint of the timeline
ClearOutpoint	Deletes the outpoint of the timeline
DeactivateAll-Proxies	Deactivates all proxies in the bin
DeleteProxies	Deletes all available proxies of the current project
DisplayForward	Starts the play-out of the timeline (speed 1)
DisplayJogForward	Increases the speed of the timeline cursor by 0.1
DisplayJogPause	Pauses a jog operation
DisplayJogReverse	Decreases the speed of the timeline cursor by 0.1 (-0.1)



Command	Explanation
DisplayShuttleForward	Starts a shuttle operation forward (speed 1); if you enter the command during any kind of timeline cursor movement, the speed will be increased by 1
DisplayShuttlePause	Pauses a shuttle operation
DisplayShuttleReverse	Decreases the speed of the timeline cursor by 1 (-1)
DisplayStop	Stops the play-out
DisplayToggleBackward	Switches between a reverse play-out (speed -1) and stop
DisplayToggleForward	Switches between a normal play-out (speed 1) and stop
EDLExport	Opens the window to generate an EDL of the current timeline content
Exit	Cuts the network connection to CLIPSTER
ExportDefaults	Opens the dialog window to export the currently set default configurations via the Configuration Tool of CLIPSTER to a file
Finalize	Opens the ' Finalize ' window to finalize and render the currently active project
GenerateClip <path><filename>	Adds the specified clip to the contents area of the bin
GenerateProxies	Creates proxies of all clips in the bin that exceed the real-time capability of CLIPSTER
GetInputRaster <timeline name>	Returns the active input raster; the timeline name has to be stated as entered in the video format settings window to configure the output (see section "Timeline Name" on page 82)
GetInputRasters <timeline name>	Returns all possible input rasters; the timeline name has to be stated as entered in the video format settings window to configure the output (see section "Timeline Name" on page 82)



Command	Explanation
<code>GetRaster <time-line name></code>	Returns the active output raster; the timeline name has to be stated as entered in the video format settings window to configure the output (see section "Timeline Name" on page 82)
<code>GetRasters <time-line name></code>	Returns all possible output rasters; the timeline name has to be stated as entered in the video format settings window to configure the output (see section "Timeline Name" on page 82)
<code>GetTimelines</code>	Returns a list of all currently active timeline names
<code>Goto <timecode></code>	Moves the timeline cursor to the position entered in timecode format
<code>GotoEnd</code>	Moves the timeline cursor to the end of the timeline
<code>GotoInpoint</code>	Moves the timeline cursor to the set inpoint of the timeline
<code>GotoOutpoint</code>	Moves the timeline cursor to the set outpoint of the timeline
<code>GotoStart</code>	Moves the timeline cursor to the beginning of the timeline
<code>Help</code>	Displays help to the various network commands
<code>ImportDefaults</code>	Opens the dialog window to import a once saved configuration of the Configuration Tool from a file
<code>IsInputRasterAvailable <time-line name> <raster></code>	Checks whether the entered raster is available for an input; the timeline name has to be stated as entered in the video format settings window to configure the output (see section "Timeline Name" on page 82); as a raster you may enter its number or name as provided, for example, by <code>GetInputRasters</code>



Command	Explanation
IsRasterAvailable <timeline name> <raster>	Checks whether the entered raster is available for an output; the timeline name has to be stated as entered in the video format settings window to configure the output (see section “Timeline Name” on page 82); as a raster you may enter its number or name as provided, for example, by <code>GetRasters</code>
JumpFrameBack	Jumps five frames backward
JumpFrameForward	Jumps five frames forward
ModeInsert	Activates the insert mode
ModeOverwrite	Activates the overwrite mode
OptionsConnect	Either connects or disconnects the driver
OptionsDefaults	Starts the Configuration Tool with the tab to configure the default configurations activated
PrerenderAll	Prerenders the project
ProjectConfig	Starts the Configuration Tool with the tab to configure the project related configurations activated
ProjectInsert	Opens the dialog window to insert a project at the current position of the timeline cursor
ProjectLoad <path><project file>	Loads the stated project file to CLIPSTER; if no project file is entered, the dialog window to open a project file will be displayed
ProjectNew	Creates a new project
ProjectSave	Saves the currently open project
ProjectSaveAs	Opens the dialog window to save the project under new file name
Quit	Exits the CLIPSTER application and, if appropriate, prompts to save the project; once CLIPSTER is closed, the network connection is severed automatically



Command	Explanation
RasterInfo <raster>	Provides further information about the entered raster; as a raster you may enter its number or name as provided, for example, by <code>GetInputRasters</code> ; the output will be as follows: width (pixels), height (pixels), frame rate (Hz), frame type (i, p, sF), dominance (odd, even), aspect ratio (floating point), category (SD, HD, Vesa, Film)
Redo	Reverses the action performed via the command <code>Undo</code>
Server	Shows the name of the server (should always be <code>DVS Clipster</code>)
SetInOutpoint	Sets an in- and outpoint at the beginning and end of the clip in the timeline where the timeline cursor is positioned
SetInpoint	Sets the timeline's inpoint at the current position of the timeline cursor
SetInputRaster <raster>	Sets the input raster; as a raster you may enter its number or name as provided, for example, by <code>GetInputRasters</code>
SetOutpoint	Sets the timeline's outpoint at the current position of the timeline cursor
SetRaster <raster>	Sets the output raster; as a raster you may enter its number or name as provided, for example, by <code>GetRasters</code>
StepCuttingNext	Jumps to the next cutting point
StepCuttingPrevious	Jumps to the previous cutting point
StepFrameBack	Steps one frame backward
StepFrameForward	Steps one frame forward
TimelineZoomIn	Zooms in on the timeline
TimelineZoomOut	Zooms out of the timeline
TrimLeft	Trims the selected in-/outpoint handler one (1) frame backward
TrimLeftFast	Trims the selected in-/outpoint handler ten (10) frames backward
TrimRight	Trims the selected in-/outpoint handler one (1) frame forward



Command	Explanation
TrimRightFast	Trims the selected in-/outpoint handler ten (10) frames forward
Undo	Reverses the latest timeline related action
Version	Shows the version number of the CLIPSTER software

5.3.3 Exiting a Network Connection

To stop and cut your network command session perform the following:

- Type in `Exit` and press the [Enter] key on your keyboard.

The connection to the CLIPSTER application is severed. However, with this command the CLIPSTER application is left in its last state, i.e. it is not closed itself. For this you have to end all operations beforehand and enter the command `quit`. It will close the CLIPSTER software which will in turn also sever the network connection.





Index

Numerics

1000/1001 speed offset 88

A-C

Action safety area 48
 Add files recursively 33
 additional configurations 89
 AIV output channels 74, 90
 Allocated History Memory 51
 Allow external connects 58
 Alpha depth 104
 Alternate structure in Bin 29, 32
 Analyse above overlay 46
 Analyse color 47
 Analyse type 47
 anamorph 55, 56, 104
 ANC - Generator 88
 Application 35
 application (external) 34
 destructive export 36
 Aspect ratio 55, 89, 104
 video overlay 75
 audio
 embedded channels 74, 90
 mode 109
 properties of multi-clip 96, 107
 sample 66, 101
 audio settings 98, 107
 Auto load last project 37
 Auto save 38
 Auto Scale 90
 autoconforming 29
 autodetection 83, 92
 autoscaling 90
 autoscaling details 80
 AUX 1 112

backup 38
 bin 26, 95
 create folders 33
 thumbnail size 27
 Bin path 44
 black level 56
 button
 Add 35, 73, 108
 Autodetection 73, 83, 92
 Cancel 18, 81, 98
 Config 16
 Default 72
 Del 108
 Delete 35, 73
 Film 83
 HD 83
 OK 18, 81, 98
 SD 83
 Vesa... 83
 button area 21
 cable specification 118
 capacity (storage) safety margin 40
 capture 106
 CCIR 601 105
 Channel offset 109
 Channels 108
 chapter overview 8
 clip
 alignment in timeline 33
 file format 101
 file name 100
 name 99
 clip management 95, 102
 clip properties 95
 exit 98
 overview 97
 start 96



CLIPSTER	7	Depth	103
control via network	121	Destructive export	36
device ID	72	device profile	72
Edit Tool	16, 78	Device type ID	72
I/O Tool	78	directory path	100
color bit depth	84, 103	Display	60
color conversion matrix	84, 105	Display type	61
color correction panel	30	Dominance	104
color grader	71, 120	drag-and-drop procedure	32
Color mode	105	search through subfolders	33
color space	84, 105	Draw color	48
of clip	105	drop report	51
scalings	84	drop-frame timecode	88
configuration		drops	39
groupings	14, 19	edit lag	69, 72
library	22	Editlag	74
load from file	23	EDL	28
save	20, 25, 81, 98	embedded audio	74, 90
save to file	22	Enable Async I/O	50
transfer settings to project	23	Enable Performance Monitor	50
Configuration Tool		Enable Scrollable History	50
configuration groupings	14, 19	Enable tooltips	66
confirmation of settings	18	exiting	
default settings	14	clip properties	98
exit	18	Configuration Tool	18
predefined settings	21	video format settings	81
project settings	14	external application	34
reset to default values	21	destructive export	36
start	16	external network connection	58
start default settings	17	external sync generator	116
start project settings	16, 17	Field mode	104
tabs	14, 19	File format	101
user interface	19	Filename(s)	100
confirmation of settings ...	18, 20, 81, 98	film raster	75
conforming	28	flags	98, 102
autoconforming	29	folders (create)	33
online-conforming	28, 29	frame information	60, 87
control panel	30	frame number	101
conventions of user guide	10	frame offset	87
create folders	33	Frame rate	104
Create folders in Bin	33	frame rate	88
crossover cable	113, 114, 118	Full	85, 105
cursor			
scrub bar	36, 47		
timeline	36, 42, 47, 53		
		G-I	
D-F		general clip properties	97
Default input raster	67	group list	20
Default raster	67	sort	20
default settings	14	H input delay	86
Default source TC	62	H output delay	86
Defaults tab	14	Head	85, 105
defragmentation tool	39	Height	103
		history mode	50
		Horizontal alignment in timeline	33



I/O mode		
multi-threaded	50	
single-threaded	50	
ID	72	
of CLIPSTER	72	
ID-String	73	
Ignore disk size	40	
Ignore in/outpoints for play	66	
Ignore reel names for online conforming	28	
Image values	27	
inpoint (setting in bin)	27	
input	79, 83	
video format settings	75	
insert projects	43	
interlaced material	62, 93, 104	
J-L		
Keep Drop Report	51	
key	104	
keycode	57	
notation	57	
Last opened files	40	
library	22, 26	
load configuration	23	
Lock synchronize	47	
locking	47	
Logarithmic waveform	68	
Loop play	52	
M-O		
master	70, 112	
multi-device operation	117	
synchronization	116	
Matrix	84	
Maximum Connections	58	
mixer function	71, 120	
enable/disable	71	
settings	71	
setup	120	
MixerControl	71	
Mode	109	
monitor output	79, 120	
mono	108, 109	
motion effect	29	
multi-clip		
properties	96, 107	
MultiDevice	70	
multi-device operation	112	
cable specification	118	
enable/disable	70	
master	112, 117	
possibilities	118	
settings	70	
setup and installation	112	
slave	112, 117	
synchronization	115	
multi-threaded I/O mode	50	
Name	35, 73, 99	
name of timeline	82	
network		
commands	82, 122	
configuration	58	
controlling CLIPSTER	121	
non-genlock	85	
NTSC	56	
NTSC Japan	56	
offset (timecode)	63, 87	
source timecode	106	
online-conforming	28, 29	
Options	36	
Original Aspect Ratio	90	
output		
SD video	55, 75	
to monitor	79, 120	
video	75	
video format settings	75	
Output Format	56	
Output LTC	64	
Output LTC raster	64	
Output VITC	64	
Overlay type	57	
overview		
of chapters	8	
of clip properties	97	
of Configuration Tool	19	
of video format settings	79	
Overwrite Bin clips	44	
P-R		
PAL	56	
Pandora TCP Port	59	
parameters of program	36	
Path	100	
Path for proxy data	52	
Path for temporary data	53	
Path for temporary operator data	54	
pedestal	56	
performance	49	



synchronizing with timeline	47	Type	101
System base video directory	38, 41	typographical conventions	10
tabs	14, 19		
Defaults	14	U-Z	
Project	14	Undo depth	42
target group	9	Use always default settings	73
TC - Drop frame	88	Use Bin path	43
TC - fps	88	User stop index	101
TC - In	92	V input delay	86
TC - Start	87	V output delay	87
TC - Type	87	value range	84, 105
TC Delay	71	Variframe	93
TCP Port	59	vertical editing	66
Pandora	59	video format	83
text information		resizing of material	90
in text information view	27	sort list	83
in thumbnail view	27	video format details	80, 84
Text values	27	video format settings	
thumbnail	27	exit	81
scrub bar	27	input	75
size	27	output	75
Thumbnail height	27	overview	79
Thumbnail sets inpoint	27	pulldown	89
Thumbnail width	27	start	78
timecode	57, 60, 88	video formats	80
delay (slave mode)	71	video output	75
drop-frame	88	video overlay	45
input	88	aspect ratio	75
offset	63, 87	Video Raster	56
offset (source timecode)	106	video raster	75, 83
output	88	default input raster	67
short	61	default output raster	67
source timecode .57, 60, 61, 62, 92,		video scopes	46
106		enabling/disabling	47
Timecode offset	63	video settings	98, 102
timeline	65, 95, 97	VTR	69
align clips	33	edit lag	69, 72
cursor	36, 42, 47, 53	ID	72
in-/outpoint	66	preroll	69, 72
marker color	67	VTR task mode	120
waveform color	67	Warn if base directory mismatch	38
timeline name	80, 82	Waveform color	67
timeline options	80	Waveform duration	68
Title safety area	48	waveforms (logarithmic)	68
Tooltip values	67	Width	103
tooltips	66	YUV matrix	105
values	67	YUV range	85
transferring settings to project	23	Zoom on cursor	42
transition	54	zooming	42
Trim audio to video frames	66		
trimming of audio clips	66		

